



Original installation and operation manual

BEKOMAT® 33U Vario / 33U Vario CO

- > BM33UV
- > BM33UVCO

■ Table of contents

1. Notes about the documentation	5
1.1 Contact	5
1.2 Information about this installation and operation manual	5
2. Safety	6
2.1 Use	6
2.1.1 Intended use	6
2.1.2 Reasonably foreseeable inappropriate use	7
2.2 Responsibility of the operating company	7
2.3 Target group and personnel	8
2.4 Explanation of the symbols used	9
2.5 Safety instructions and warning notices	10
2.5.1 Basic safety instructions	10
2.5.2 Safe operation	10
2.5.3 Sudden escape of pressurised fluids	11
2.5.4 Electric voltage	11
2.5.5 Transport and storage	12
2.5.6 Installation	12
2.5.7 Maintenance	13
2.5.8 Handling hazardous substances	13
2.5.9 Working on electronic components	14
2.5.10 Use of spare parts, accessories or materials	14
2.6 Warning notices	14
3. Product information	15
3.1 Product description	15
3.2 Type plate	15
3.3 Product overview	16
3.4 Scope of delivery	16
3.5 Exploded drawing	17
3.6 Function description	18
4. Technical data	20
4.1 Operating parameters	20
4.2 Storage and transportation parameters	21
4.3 Materials	21
4.4 Screw fastening torques	21
4.5 Dimensions	22
4.6 Installation dimensions	23
4.7 Terminal diagram	23
5. Transport and storage	24
5.1 Warning notices	24
5.2 Transport	24
5.3 Storage	24

6. Installation	25
6.1 Warning notices	25
6.2 Installation requirements	25
6.3 Installation work	27
7. Electrical installation	30
7.1 Warning notices	30
7.2 Connection work	30
7.2.1 Connecting the power supply	31
7.2.2 Connecting the dry contact	33
7.2.3 Connecting the external TEST button	35
8. Start-up procedure	37
8.1 Warning notices	37
8.2 Start-up steps	37
9. Operation	38
9.1 Warning notices	38
9.2 Operating states	38
10. Maintenance	41
10.1 Warning notices	41
10.2 Maintenance schedule	41
10.3 Maintenance work	42
10.3.1 Changing the Service-Unit	42
10.3.2 Functional test	48
10.3.3 Visual inspection	48
10.3.4 Leakage test	48
10.3.5 Cleaning	49
10.4 Warning notices	49
11. Consumables, accessories and spare parts	50
11.1 Order information	50
11.2 Accessories	50
11.3 Spare parts	50
12. Shut-down procedure	51
12.1 Warning notices	51
12.2 Shut-down steps	52
13. Dismounting	53
13.1 Warning notices	53
13.2 Dismounting steps	53
14. Disposal	55
14.1 Warning notices	55
14.2 Disposal of operating and auxiliary materials	56
14.3 Disposal of components	56

15. Troubleshooting..... 57

16. Appendices..... 58

 16.1 Certificates..... 58


17. Notes 59

1. Notes about the documentation


This documentation contains all the necessary steps for the use and operation of the product and the accessories.

1.1 Contact

Manufacturer	Customer service and tools
BEKO TECHNOLOGIES GmbH Im Taubental 7 41468 Neuss Phone: +49 2131 988-1000 info@beko-technologies.com www.beko-technologies.com	BEKO TECHNOLOGIES GmbH Im Taubental 7 41468 Neuss Phone: +49 2131 988-1000 service-eu@beko-technologies.com www.beko-technologies.com

INFORMATION	Country-specific manufacturer representation
	You can contact the country-specific manufacturer's representative via the address listed in the address section on the rear cover or by using the contact form on the manufacturer's website.


1.2 Information about this installation and operation manual

INFORMATION	Copyright protection
	The contents of the installation and operation manual in the form of text, figures, illustrations, photographs, technical drawings, diagrams and other representations are protected by the copyright of the manufacturer. The distribution as well as the duplication of this document, the exploitation and the communication of its contents are prohibited unless expressly authorised.

Publication date	Revision	Version	Reason for change	Scope of amendment
1 August 2022	03	00	Editorial revision	New document
1 February 2024	04	00	Technical changes to the product	"4. Technical data" on page 20 "7. Electrical installation" on page 30

The installation and operation manual, hereinafter referred to as the manual, must always be kept close to the product and be in a permanently legible condition.

The manual must be handed over along with the product if it is sold or passed on.

NOTE	Follow the instructions given in the manual
	This manual contains all the basic information required for safe operation of the product and must be read before any actions are performed. Otherwise personal and material hazards as well as malfunction and device failure are possible.

2. Safety

2.1 Use

The **BEKOMAT® 33U Vario / 33U Vario CO**, also referred to in the following as the product or **BEKOMAT®**, is an electronically level-controlled condensate drain used for discharging condensate in pressurised systems. The **BEKOMAT®** is able to drain condensate at operating pressure with no pressure loss.

2.1.1 Intended use

Any use of this system other than the use described in this manual is hereby deemed to be non-intended and can cause a hazard for the safety of people and the environment.

The following must be noted for intended use:

- Read and follow the manual.
- Only use the product and the accessories in indoor areas.
- Only use the product and accessories within the operating parameters given in the “Technical Data”.
- Only use the product and accessories within the operating parameters specified in the “Technical data” section of this manual and in accordance with the agreed terms of supply.
- Only use the product and accessories with media which are free of caustic, aggressive, corrosive, toxic, flammable, oxidising and inorganic components. In cases of doubt an analysis must be carried out.
- Only use the product and accessories in surroundings where splash water is the maximum possible water exposure that can occur. The splash water must be free of corrosive components.
- Only use the product and accessories in areas which are free of toxic and corrosive chemicals and gases.
- Use the product and accessories only within a piping system designed for the operating parameters specified in section “4. Technical data” on page 20, with appropriate connections, pipe diameters and installation clearances.
- Only use the product and accessories outside potentially explosive atmospheres.
- Only use the product and accessories away from direct solar radiation and heat sources as well as areas subject to frost.
- Only combine the product and the accessories with the recommended manufacturer products and components indicated in this manual.
- Adhere to the prescribed maintenance schedule.

Before using the product and the accessories, the operating company must make sure that all conditions and prerequisites for intended use are given.

The product and the accessories have been exclusively designed for stationary use in a commercial or industrial area. All of the assembly, installation, operation, maintenance, disassembly and disposal work described must be performed exclusively by qualified skilled technical personnel.

2.1.2 Reasonably foreseeable inappropriate use

A case of reasonably foreseeable inappropriate use is deemed to have occurred if the product or the accessories are used in any other way than that described in the "Intended use" section. Reasonably foreseeable inappropriate use includes the use of the product or the accessories in a manner not intended by the manufacturer or supplier but which may result from foreseeable human behaviour.

Reasonably foreseeable inappropriate use includes:

- The execution of any kind of modification, in particular constructive and process-technology related interventions.
- The suspension, bridging or non-application of existing or recommended safety equipment.
- Using the product and accessories in piping systems with carbon dioxide as the operating medium.

This list is not exhaustive as not all possible inappropriate use can be foreseen in advance. If the operating company is aware of any inappropriate use of the product or accessories which are not listed here, the manufacturer must be informed immediately.


2.2 Responsibility of the operating company

The responsible operating company must ensure the following to prevent accidents, incidents and adverse effects on the environment:

- Before all actions, check to ensure that the manual available does in fact belong to the product.
- The product and the accessories are used, serviced and repaired in accordance with the intended use.
- The product and accessories are only used with the recommended and fully operable safety equipment.
- All mounting, installation and maintenance work must be carried out exclusively by qualified skilled technical personnel.
- Personnel have the necessary personal protective equipment available and also use this equipment.
- Suitable technical safety measures are taken so that the permissible operating parameters are adhered to.
- Keep all safety symbols and the type plate on the product in a legible state. Replace damaged and illegible marking immediately.

2.3 Target group and personnel

This manual addresses the personnel listed below who are involved with work on the product or the accessories.

INFORMATION	Personnel requirements
	<ul style="list-style-type: none"> • Minors are strictly prohibited from working with and on the product and its accessories. • The personnel may not execute any actions on the product or the accessories when they are under the influence of drugs, medications, alcohol or other substances that may impair their consciousness.

Operating personnel

Operating personnel are persons who are able to operate the product and the accessories safely on the basis of knowledge of the manual and instruction at the product and accessories. Operating personnel can recognise possible malfunctions and dangerous situations independently and arrange for corresponding measures.

Skilled technical personnel - transport and storage

Skilled technical personnel - transport and storage are people who, due to their training, professional experience and qualifications, have all the necessary skills to safely carry out and direct all actions relating to the transport and storage of the product, to independently identify potentially hazardous situations and to take measures to avert danger.

The skills required include, in particular, experience operating hoists, forklifts and lifting equipment and familiarity with locally applicable laws, standards and guidelines relating to transport and storage.

Skilled technical personnel - pressure equipment and systems

Skilled technical personnel specialising in pressure equipment and systems are people who, due to their training, professional experience and qualifications, have all the necessary skills to safely carry out and direct all actions relating to pressurised fluids and systems, to independently identify potentially hazardous situations and to take measures to avert danger.

The skills required include, in particular, experience using measuring equipment and control equipment, as well as familiarity with locally applicable laws, standards and regulations for pressurised systems.

Skilled technical personnel - electrical engineering

Skilled technical personnel - electrical engineering are people who, due to their training, professional experience and qualifications, have all the necessary skills to safely carry out and direct all actions relating to electricity, to independently identify potentially hazardous situations and to take measures to avert danger.










The skills required include, in particular, experience in using electrical plants, measurement and control technology as well as familiarity with locally applicable laws, standards and regulations for dealing with electrical equipment and systems.

Skilled technical personnel - product servicing

Skilled technical personnel - product servicing are people who have the skills and qualifications stated in all the skilled personnel definitions named above. Skilled technical personnel - product servicing must have documented proof of training and authorisation for all work on the product.

2.4 Explanation of the symbols used

The symbols used below indicate safety-relevant and important information which must be adhered to when handling the product and to ensure safe and optimum operation.

Symbol	Description / explanation
	General warning symbol (danger, warning, caution)
	Warning: pressurised system
	Warning: electric voltage
	Read and follow the installation and operation manual
	General instruction symbol
	Wear safety footwear
	Use protective gloves (cut-proof and liquid-resistant)
	Wear safety goggles with side shields
	General information

2.5 Safety instructions and warning notices

This section provides an overview of all the important safety aspects for personal protection as well as for the safe and problem-free operation of the product and accessories.

The following sections list the dangers posed by this product and the accessories even with intended use. To minimise the risk of personal injury and damage to property and to avoid dangerous situations, observe the safety instructions listed and adhere to the warning notices in the other sections of this manual.

Basic warning notices and the necessary qualifications of skilled technical personnel are always listed at the beginning of the section in the “Warning notices” section.

Warning notices related to specific actions are printed directly before potentially hazardous procedures or sequences of actions.

Failure to observe safety instructions and warning notices can result not only in personal injury, but also in malfunctions, device failure and damage to property.

2.5.1 Basic safety instructions

- Before starting work, refer to the technical documentation for the entire system and observe the overall operating instructions.
- Carry out a risk assessment before starting work on site (last minute risk assessment).
- Use suitable personal protective equipment for all work.
- Set up a safety area around the working area during all installation, maintenance and repair work.
- Use existing system-specific protection procedures (e.g., LOTO procedure) in order to safely de-energise and isolate the system or system sections.

2.5.2 Safe operation

The following actions may result in serious injury or death:

- Start-up and operation of the product and accessories outside the permissible limit values and operating parameters
- Unauthorised interference and unauthorised modifications of the product and accessories

To guarantee the safe operation of the product and accessories, observe the following:

- Observe the limits and operating parameters specified on the type plate and in the manual.
- Check whether the permissible operating parameters have been changed or restricted by the use of accessories.
- Observe the requirements regarding installation location and ambient conditions.
- Adhere to the maintenance intervals.

2.5.3 Sudden escape of pressurised fluids

The following situations may result in serious injury or death:

- Contact with fast or suddenly escaping fluids
- Bursting system parts
- Whipping of pressurised hoses and pipes

For the safe handling of pressurised systems, observe the following:

- Observe the following safety rules during all work:
 1. Shut down the system or system section.
 2. Secure the system or system section against restarting.
 3. Reduce the pressure in the system or all system sections to the ambient pressure.
e.g. by slowly releasing the pressure in a controlled manner via relief valves
 4. Lock out and tag out the system or system section so that it cannot be pressurised again.
- Check the pressurised system or system section for safety, contamination and possible damage.
- Before pressurisation, check all system connections for leak tightness and tighten if necessary.
- Make absolutely sure to charge the system or system section with pressure slowly.
- Avoid pressure blows and high differential pressures.
- Compensate any vibrations occurring in the pipe network by using vibration dampers.

2.5.4 Electric voltage

Contact with live components may result in serious personal injury or death.

To ensure the safe handling of live components, observe the following:

- Only connect the product and the accessories to the power supply if they are undamaged.
- Comply with all locally applicable legal requirements and regulations during installation.
- Provide a circuit breaker in the power supply within easy reach of the product.
→ The circuit breaker disconnects all current-carrying conductors.
- Only operate the product and accessories with the cover complete and closed, the electronics housing closed, or the switch cabinet closed.
- Before starting work on the product:
 1. Disconnect
→ Disconnect the product from all poles and all sides
 2. Secure against restarting
 3. Determine the absence of voltage at all poles
→ With suitable and permissible measuring device (e.g. two-pole voltage tester)
 4. Earth and short circuit

2.5.5 Transport and storage

Inappropriate transport or storage may result in personal injury or damage to property.

In order to ensure safety during the transport and storage of the product and accessories, observe the following:

- Use personal protective equipment during all work with packaging material.
- Handle packaging, the product and accessories carefully.
- Transport and handle the product and accessories according to the markings on the packaging.
- Use only proper transportation, lifting and lashing equipment that is in proper working order.
- Use only transportation, lifting and lashing equipment that are rated for the total weight of the product.
- Always adhere to the permissible transport and storage parameters.
- Store the product and accessories only outside of areas exposed to direct sunlight and heat sources.

2.5.6 Installation

Inappropriate assembly or electrical installation of the product and accessories may result in personal injury and damage to property as well as impair operation.

For safe assembly and electrical installation, observe the following:

- Install the product, the accessories, and all parts and materials used so that they are not subject to mechanical tension.
- Check all plug-type connections for a correct fit.
- Avoid a stumbling hazard by routing cables and hoses accordingly.
- Avoid mechanical strain on the cables.
- Fix and fasten hoses in such a way that they cannot flap around.
- Install the inlet lines as fixed pipes.

2.5.7 Maintenance

Inappropriate completion of maintenance and repair work may result in serious personal injuries or death.

For safe maintenance and repairs, observe the following:

- Before starting work, depressurise the pressurised product and accessories and secure them against unintentional pressurisation.
- Before starting work, isolate the product and accessories from the power source and secure them against being switched back on again unintentionally.
- Only use materials approved for the respective application.
- Use only suitable tools that are in proper working order.
- Only use cleaned pipes and hoses that are free of dirt and corrosion.
- Never use abrasive or aggressive cleaning agents or solvents which could damage the outer coating (e.g. markings, type plate, corrosion protection, etc.).
- Never clean the device with hard or pointed implements.
- Use only the specified materials and media for cleaning.
- Observe statutory, local and in-house hygiene regulations.
- Pay attention to order and cleanliness during maintenance and repair work. Prevent contamination from entering the opened product or accessories. Put dismantled components and accessories aside in a safe place immediately after dismantling.
- After completing maintenance and repair work, remove all tools and cleaning agents used, as well as all parts that are no longer needed, from the work area.
- Only dispose of the product and accessories when cleaned and freed of any residue.
- Dispose of all components, parts, operating and auxiliary materials as well as cleaning agents professionally and in accordance with all locally applicable legal requirements and regulations.
- Dispose of electrical and electronic components using a specialist disposal company or return them to manufacturer.

2.5.8 Handling hazardous substances

Contact with condensate containing substances which endanger health and the environment can pose a health hazard, causing irritation and/or damage to the eyes, skin and mucous membranes. In addition, contaminated condensate must be prevented from entering the sewage system, bodies of water or the ground.

For the safe handling of polluted condensate, observe the following:

- Use suitable protective equipment when handling condensate.
- Collect and dispose of any leaking or spilled condensate in accordance with locally applicable legal requirements and regulations.

2.5.9 Working on electronic components

Electrostatic discharge (ESD) can cause damage to electronic components, and malfunctions, device failures or material damage are possible.

- Take proper measures to prevent electrostatic discharge (e.g. earthing, potential equalisation, ESD-compatible dissipative work pads etc.).

2.5.10 Use of spare parts, accessories or materials

The use of incorrect spare parts, accessories or materials, as well as auxiliary and operating materials, may result in death or serious injury. Malfunction and device failure as well as material damage can occur.


- Only use undamaged original parts, auxiliary and operating materials which are specified by the manufacturer to complete all work.
- Only use the materials approved for the respective application and suitable tools in proper working order.
- Only use cleaned pipes that are free of dirt and corrosion.
- Only use electric components and materials that comply with locally applicable legal requirements and regulations (standards, directives etc.) for electrical safety.

2.6 Warning notices

Warning notices warn against dangers when handling the product and accessories.

Observe the warning notices in order to avoid personal injury, damage to property and impaired operation.

Structural set up:

SIGNAL WORD	Type and source of danger
 Symbol	Possible consequences if the danger is ignored
	<ul style="list-style-type: none"> • Measures to prevent the danger

Signal words:

DANGER	Imminent hazard Consequences of non-compliance: Death or serious personal injury
WARNING	Imminent hazard Consequences of non-compliance: Death or serious personal injury are possible
CAUTION	Potential hazard Consequences of non-compliance: Personal injury or damage to property are possible
NOTE	Additional notes Consequences of non-compliance: Damage to property, malfunction and device failure are possible. No hazard to people or endangerment of safe operation.

3. Product information

3.1 Product description

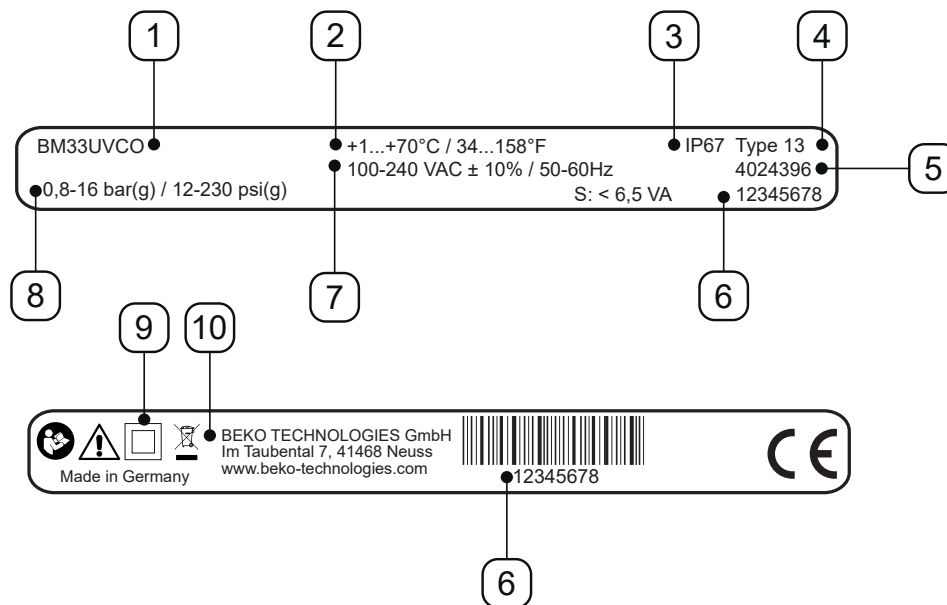
The **BEKOMAT**® is an electronically level-controlled condensate drain used for draining off condensate in pressurised systems. The **BEKOMAT**® is able to drain condensate at operating pressure with no pressure loss.

The **BEKOMAT**® has a dry contact on the power supply board. It can be used to display a fault message at a remote maintenance centre.

The **BEKOMAT**® has an option for the connection of an external TEST button. This makes it possible for condensate to be discharged via remote control. If the external contact is closed, the solenoid valve opens in the same way as when the TEST button is pressed on the top cover, causing the **BEKOMAT**® to discharge condensate.

3.2 Type plate

The type plate, which contains identification information and operating parameters for the product, is located on the bottom cover.

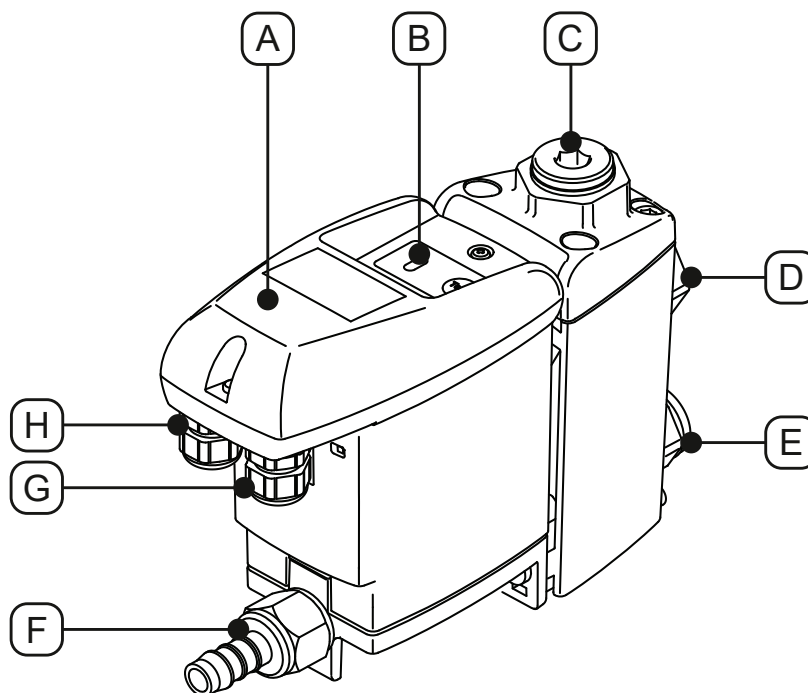


Example illustration

Pos. No.	Description / explanation
[1]	Product name
[2]	Operating temperature
[3]	IP protection class
[4]	Enclosure rating
[5]	Material number
[6]	Serial number
[7]	Operating voltage
[8]	Operating pressure
[9]	IP rating II
[10]	Manufacturer

For more information, refer to section “2.4 Explanation of the symbols used” on page 9.

3.3 Product overview



Pos. No.	Description / explanation
[A]	Control unit, complete
[B]	Control panel
[C]	Condensate inlet

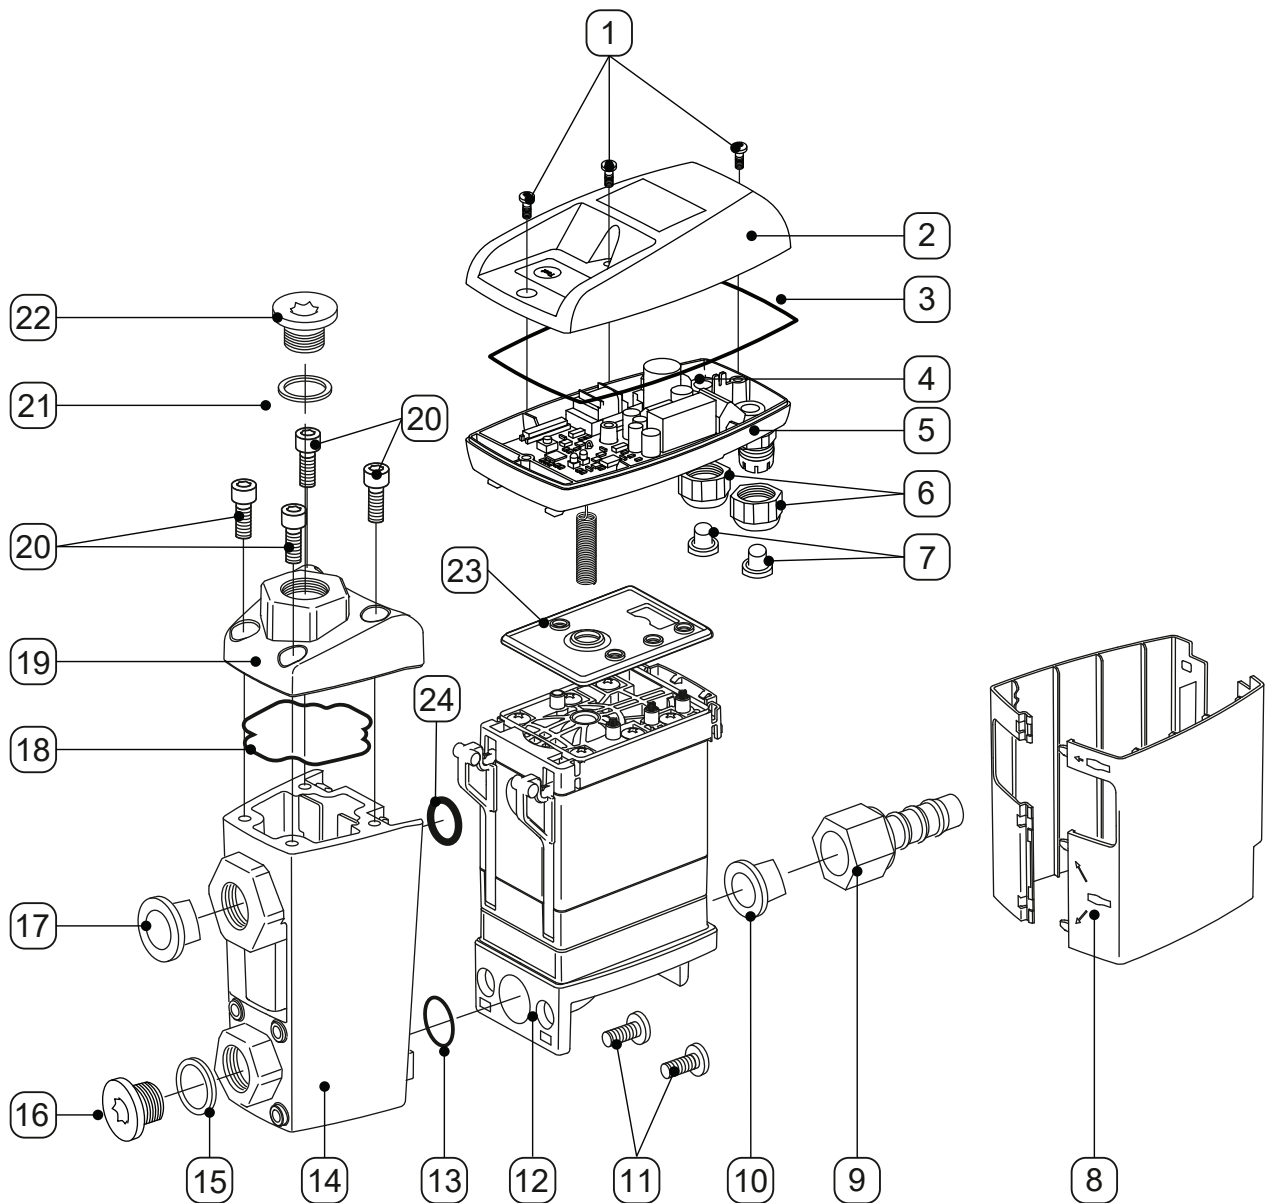
Pos. No.	Description / explanation
[D]	Condensate drain
[E]	Right cable gland
[F]	Left cable gland

3.4 Scope of delivery

The table below shows the scope of delivery of the product:

Illustration	Description / explanation
	BEKOMAT® 33U Vario / 33U Vario CO
	Original installation and operation manual
	1 x connector

3.5 Exploded drawing



Pos. No.	Description / explanation
[1]	Screw 3.5 x 10 mm
[2]	Top cover
[3]	Moulded seal
[4]	Sensor board
[5]	Bottom cover
[6]	Screw fitting
[7]	Plug
[8]	Design shell
[9]	Hose connection
[10]	Tapered plug
[11]	Screw M6 x 16 mm
[12]	Service-Unit

Pos. No.	Description / explanation
[13]	18.5 x 2 mm O-ring
[14]	Condensate collecting container
[15]	Flat gasket
[16]	Screw plug G1/2"
[17]	Screw plug G1/2"
[18]	48.9 x 2.62 mm O-ring
[19]	Condensate collecting container cover
[20]	Hexagon socket head cap screw M6 x 16 mm
[21]	Flat gasket
[22]	Screw plug G1/2"
[23]	Sealing mat
[24]	8 x 4 mm O-ring

3.6 Function description

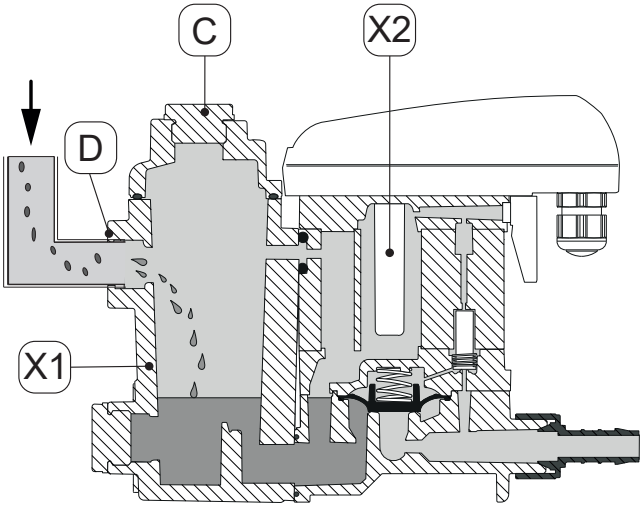
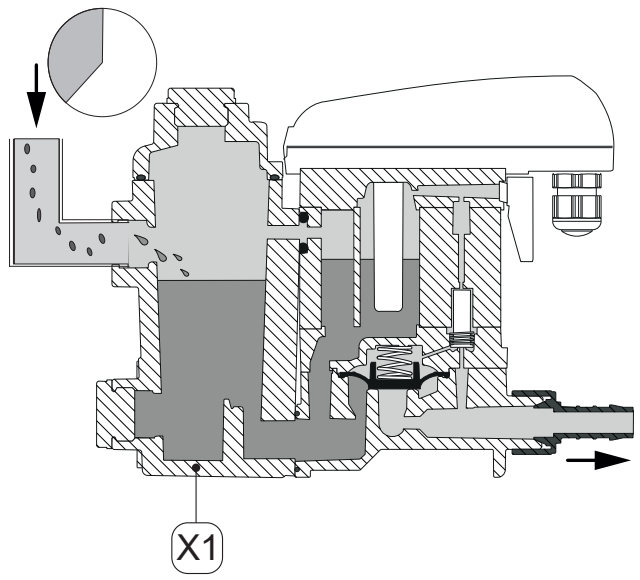
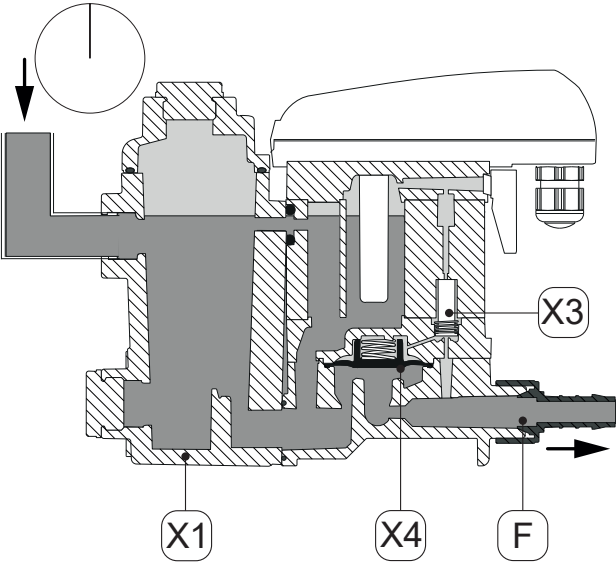
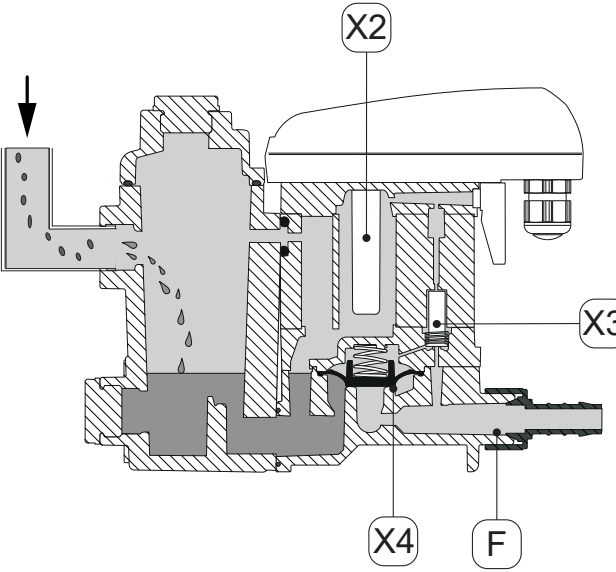
Illustration	Description / explanation
 <p>A cross-sectional diagram of the BEKOMAT unit. On the left, there are two inlet ports: a vertical one labeled 'C' and a horizontal one labeled 'D'. An arrow points down into inlet 'D'. Condensate is shown flowing into a central collecting container labeled 'X1'. A sensor tube labeled 'X2' extends from the top of the unit down into the liquid in container 'X1'. The unit is shown in a cutaway view to reveal internal components like a float valve and a pump mechanism at the bottom right.</p>	<p>The condensate flows via the vertical condensate inlet [C] or the horizontal condensate inlet [D] into the BEKOMAT® and collects in the collecting container [X1]. The filling level in the housing [X1] is continuously monitored by a capacitive sensor in the sensor tube [X2].</p>
 <p>A second cross-sectional diagram of the BEKOMAT unit, similar to the first but showing a higher liquid level in the collecting container 'X1'. A circular inset in the top left corner shows a magnified view of the liquid surface in the inlet line, with a shaded area indicating the rising level. An arrow at the bottom right points to the right, indicating the direction of condensate flow out of the unit.</p>	<p>Once the condensate has reached the maximum filling level, the pre-set waiting time in the controller is started. During the waiting time, the condensate level in the housing [X1] and the condensate inlet line increases continuously.</p>

Illustration	Description / explanation
	<p>Once the pre-set waiting time has expired, the controller switches the pilot valve [X3].</p> <p>The area above the membrane [X4] is depressurised.</p> <p>The membrane [X4] lifts off the valve seat and the excess pressure in the housing [X1] presses the condensate into the condensate drain [F].</p>
	<p>When the sensor in the sensor tube [X2] is no longer covered by condensate, the controller activates the pilot valve [X3] and pressure builds up above the membrane [X4].</p> <p>The membrane [X4] is pressed against the valve seat and the condensate drain [F] is sealed and closed off.</p>

4. Technical data

4.1 Operating parameters

BEKOMAT®	33U Vario	33U Vario CO
Relative ambient humidity	10 ... 80 %, without condensation	
Maximum operating height	3000 m 3280.84 yd	
Minimum / maximum operating pressure	0.8 ... 16 bar(g) 12 ... 230 psi(g)	
Minimum / maximum operating temperature	+1 ... 70 °C +34 ... +158 °F	
Average discharge rate	146 l/h 38.57 gal/h	
Maximum discharge rate (short-term)	200 l/h 52.83 gal/h	
Connection*, condensate inlet	3 x G1/2" internal, maximum screw-in depth: 13 mm (1/2 in)	
Connection, condensate drain	1 x G1/2" external, hose fitting for hose diameter 13 mm (1/2 in), internal	
Media	Condensate, oil-contaminated	Condensate, oil-contaminated or oil-free
Empty weight	1.63 kg 3.63 lbs	
Operating voltage	100 ... 240 VAC ±10% (50 ... 60 Hz) or 24 VAC -10%/+20% (50 ... 60 Hz) or 24 VDC -10%/+20% (see type plate)	
Power consumption	6,5 ... 8 VA	
Degree of protection	IP67	
Enclosure rating	Type 13	
Overvoltage category (IEC 61010-1)	II	
Degree of pollution (IEC 61010-1)	2	
Dry contact connection data	AC: max. 250 V / 1 A DC: max. 30 V / 1 A	
Recommended cable diameter	5 ... 10 mm 0.23 ... 0.33 in	
Recommended wire cross-sectional area	0.75 ... 1.5 mm ² AWG 14 ... 20	

* The NPT thread version is available as an option.

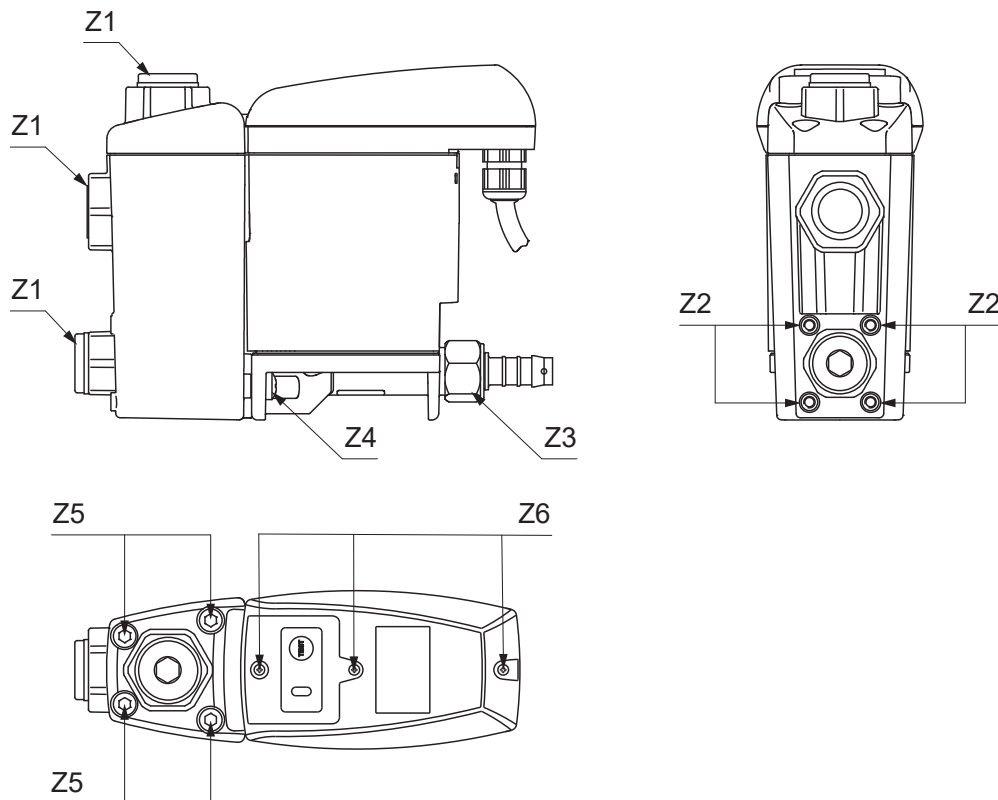
4.2 Storage and transportation parameters

BEKOMAT®	33U Vario	33U Vario CO
Minimum / maximum temperature, storage and transport		+1 ... +70 °C +34 ... +158 °F

4.3 Materials

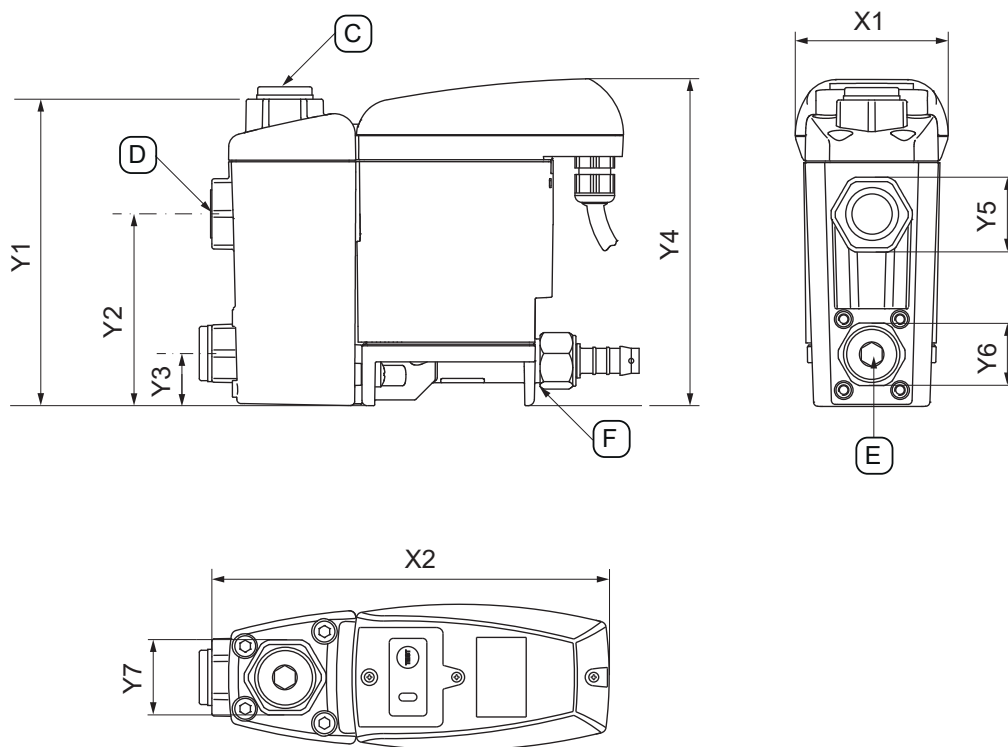
BEKOMAT®	33U Vario	33U Vario CO
Housing	Aluminium plastic, glass fibre reinforced	Aluminium, hardcoated plastic, glass fibre reinforced
Membrane	FKM	

4.4 Screw fastening torques



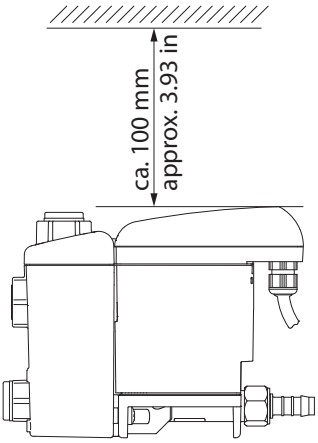
Pos. No.	Description / explanation	Tightening torques
[Z1]	Screw plug, condensate inlet	35 Nm +2 Nm (25.82 ft-lb +1.46 ft-lb)
[Z2]	Screws, mounting brackets (optional)	8 Nm +2 Nm (5.9 ft-lb +1.46 ft-lb)
[Z3]	Hose connection, condensate drain	3 ... 4 Nm (2.21 ... 2.95 ft-lb)
[Z4]	Screws, Service-Unit	2.5 Nm +0.5 Nm (1.84 ft-lb +0.37 ft-lb)
[Z5]	Screws, condensate collecting container cover	8 Nm +2 Nm (5.9 ft-lb +1.46 ft-lb)
[Z6]	Screws, top cover	0.9 Nm +0.5 Nm (0.66 ft-lb +0.37 ft-lb)

4.5 Dimensions

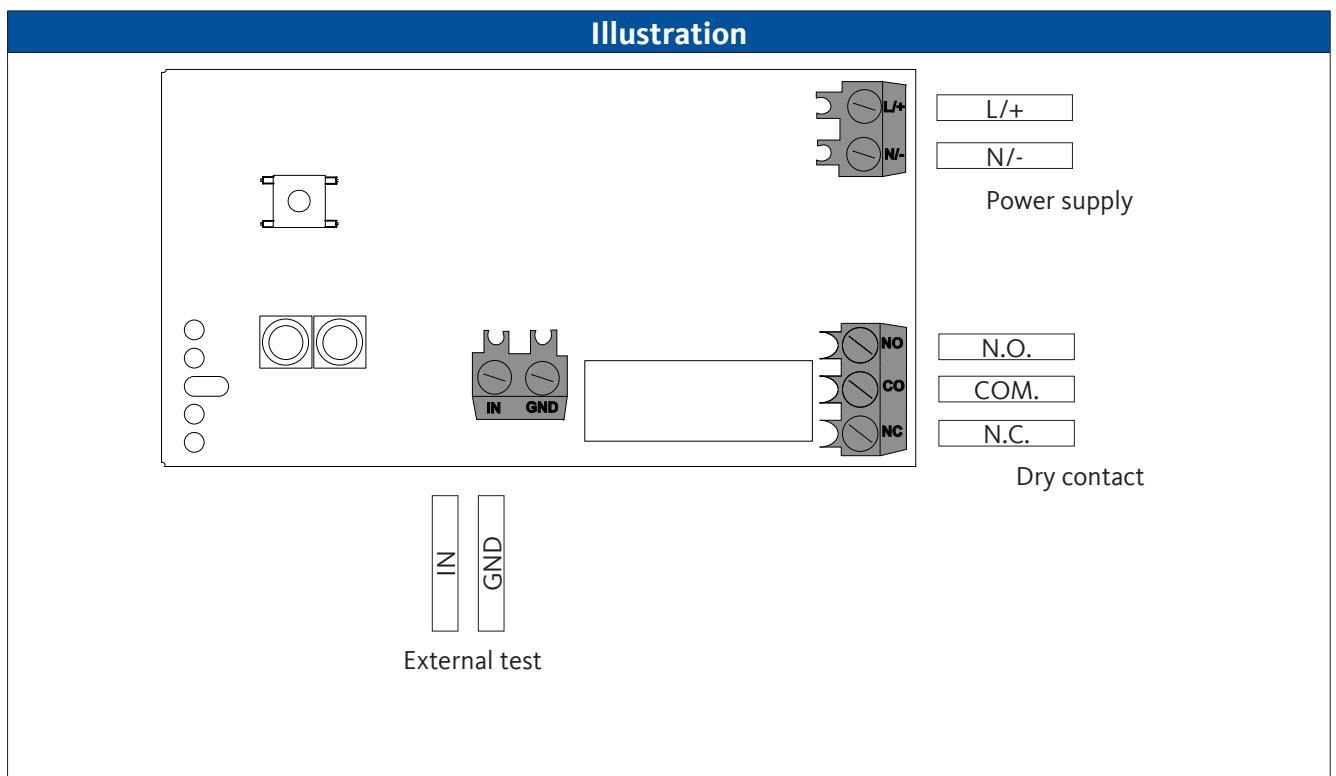


Pos. No.	BEKOMAT® 33U Vario	BEKOMAT® 33U Vario CO
[X1]		73.4 mm 2.89 in
[X2]		198 mm 7.78 in
[Y1]		147 mm 5.79 in
[Y2]		92 mm 3.62 in
[Y3]		25 mm 0.98 in
[Y4]		157 mm 6.18 in
[Y5]		34 mm 1.34 in
[Y6]		28 mm 1.10 in
[Y7]		34 mm 1.34 in
[C] - Connection, condensate inlet		G1/2" (NPT 1/2")
[D] - Connection, condensate inlet		G1/2" (NPT 1/2")
[E] - Connection, condensate inlet		G1/2" (NPT 1/2")
[F] - Connection, condensate drain		G1/2" Ø 13 (dia 0.51)

4.6 Installation dimensions

Illustration	Description / explanation
	<p>Allow sufficient assembly space above the top cover at the place of installation so that the LEDs are visible and the TEST button can be pressed.</p>

4.7 Terminal diagram





5. Transport and storage

5.1 Warning notices

Personnel

Skilled technical personnel - transport and storage (see section "2.3 Target group and personnel" on page 8)

CAUTION	Inappropriate transport or storage
	<p>Inappropriate transport or storage may result in personal injury or damage to the device.</p> <ul style="list-style-type: none"> • Use personal protective equipment during all work with packaging material. • Handle packaging, the product and accessories carefully. • Use only proper transportation, lifting and lashing equipment that is in proper working order. • Use only transportation, lifting and lashing equipment that are rated for the total weight of the product. • Always adhere to the permissible transport and storage parameters.
NOTE	Handling packaging material
	<p>Inappropriate disposal of packaging materials can cause environmental damage.</p> <ul style="list-style-type: none"> • Dispose of the packaging material in accordance with the applicable legal requirements and provisions of the country and place of use.

5.2 Transport

After transporting and removing the packaging material, inspect the product for possible transport damage. If you find any damage, notify the carrier company, the manufacturer or one of its agents immediately.

Transport the product as follows:

- Only transport the product in its original packaging.
- Handle packaging and the product with care.
- Note the transport weight specification and marking on the packaging.
- Secure the packaging and the product against slipping and falling during transport.
- Pack all parts impact-proof using suitable material.

5.3 Storage


Store the product and the accessories as follows:

- Adhere to the storage parameters in section "4.2 Storage and transportation parameters" on page 21.
- Store in a closed, dry as well as frost-free room.
- Store protected from external influences of the weather, direct sunlight and sources of heat.
- Secure against falling over and protect against vibrations at the storage location.

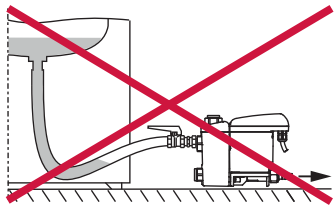
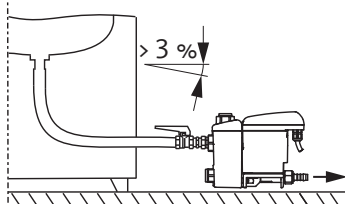
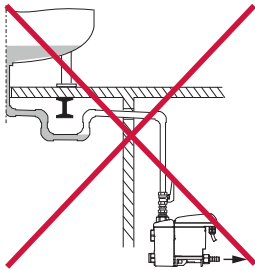
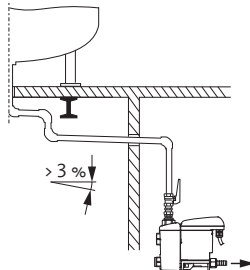
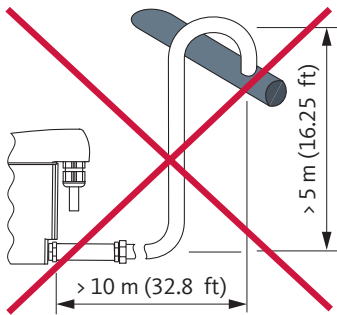
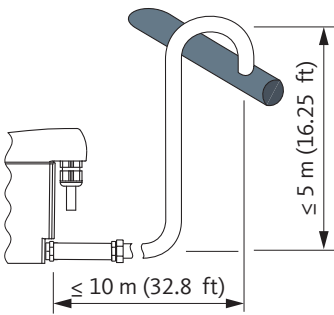
6. Installation

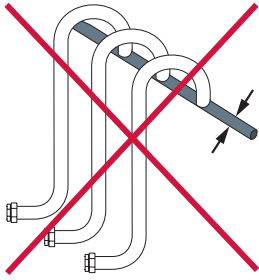
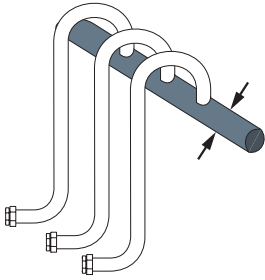
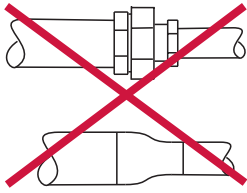
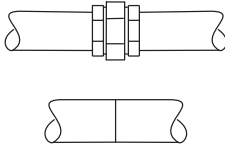
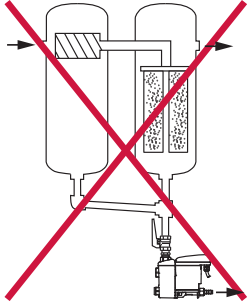
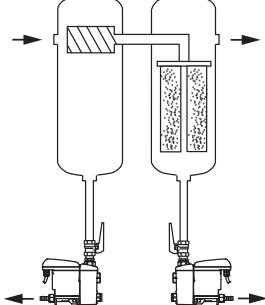
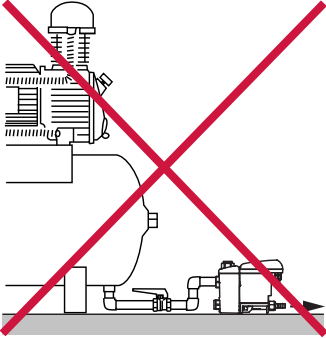
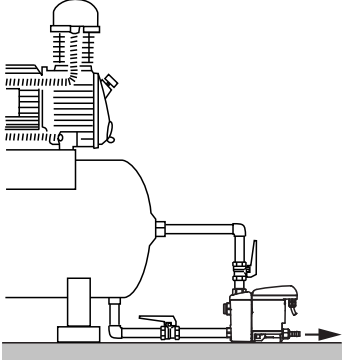
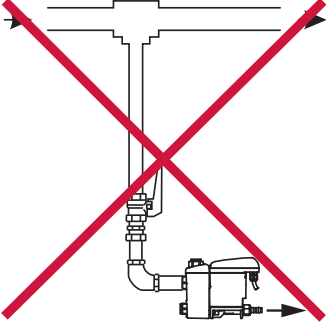
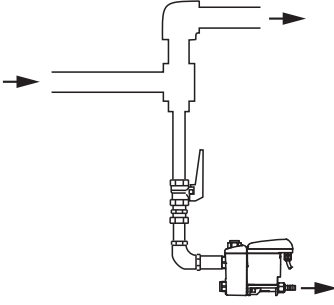
6.1 Warning notices

Personnel	
Skilled technical personnel - pressure equipment and systems (see section "2.3 Target group and personnel" on page 8)	

DANGER	Sudden escape of pressurised fluids
	<p>There is a danger of death or serious personal injury resulting from contact with fast or suddenly escaping fluids or through bursting system parts.</p> <ul style="list-style-type: none"> • Before starting work, depressurise the pressurised system and secure it against unintentional pressurisation. • Mount all pipes and hoses free of mechanical stress.


6.2 Installation requirements

Wrong	Correct	Description / explanation
		<p>Continuous fall > 3% in hoses</p> <ul style="list-style-type: none"> • When using hoses as the inlet line, ensure a continuous fall >3 %. • Make sure that no water pockets form.
		<p>Continuous fall > 3% in pipes</p> <ul style="list-style-type: none"> • When installing the inlet line pipe, ensure a continuous fall >3 %. • Make sure that no water pockets form.
		<p>Drain line design</p> <ul style="list-style-type: none"> • Do not use shut-off valves in the drain line. • Only connect the BEKOMAT® to the drain line using a hose. <ul style="list-style-type: none"> → The hose compensates for assembly tolerances, vibrations and thermal expansion. • Do not install the drain line on storage or transportation surfaces. • The drain line may be a maximum of 10 m (32.8 ft) long and installed at a maximum of 5 m (16.25 ft) rise. <ul style="list-style-type: none"> → The minimum operating pressure increases by 0.1 bar(g) (1.5 psi(g)) per metre of incline.

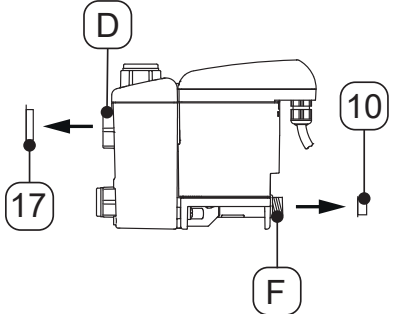
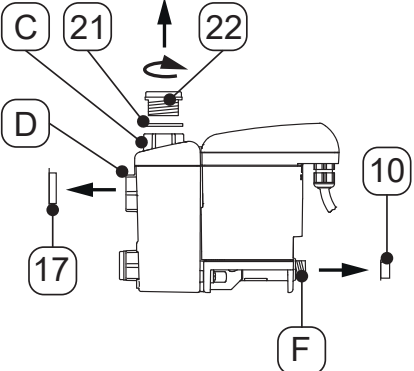
Wrong	Correct	Description / explanation
		<p>Manifold design</p> <ul style="list-style-type: none"> The cross-section of the manifold must be at least equal to the sum of the individual cross-sections of the connected inlet lines. Route the manifold with a continuous slope >3%.
		<p>Maintain the minimum pipe diameter</p> <ul style="list-style-type: none"> The minimum inside diameter of the inlet line and drain line is 13 mm (0.5 in). Do not restrict or reduce the (minimum) pipe diameter with reducers (reducing nipple fittings).
		<p>Bypassing filters</p> <ul style="list-style-type: none"> Discharge each condensate collection point with a separate BEKOMAT®. Do not create filter bypasses.
		<p>Ensure venting</p> <ul style="list-style-type: none"> If the slope in the inflow is not sufficient or there are other problems with the inlet, install a venting line.
		<p>Discharge from pressurised pipes</p> <ul style="list-style-type: none"> Divert the flow of gas to provide a deflecting surface to discharge the fluid components in the gas.

6.3 Installation work

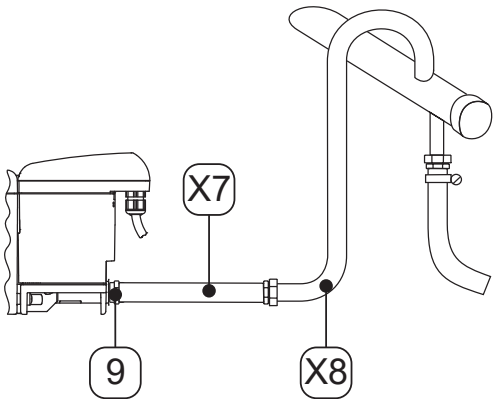
For installation and mounting work to be carried out, the following prerequisites must be met, and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> Combination wrench or adjustable wrench 	<ul style="list-style-type: none"> Sealants e.g. PTFE Inlet line Drain line Hose, interior diameter 8 ... 10 mm (0.31 ... 0.39 in), length approx. 30 cm (1 ft) 	<p>Always to be worn:</p> 

Preparatory tasks	
1.	Depressurise the pressurised system or the respective system section and secure it against unintentional pressure build-up.
2.	Get the hose and hose clamp ready for connection to the condensate drain.

Installation work	
Illustration	Description / explanation
	<p>Horizontal connection of the condensate inlet line</p> <p>1. Remove the plugs [17, 10] from the condensate inlet [D] and condensate drain [F].</p>
	<p>Vertical connection of the condensate inlet line</p> <p>1. Remove the plugs [17, 10] from the condensate inlet [D] and condensate drain [F]. Unscrew the screw plug [22] with the flat gasket [21].</p>

Installation work	
Illustration	Description / explanation
	<p>Horizontal connection of the condensate inlet line</p> <p>2. Screw the hose fitting provided [9] onto the condensate drain [F] and tighten with a torque of 3 ... 4 Nm (2.21 ... 2.95 ft-lb).</p>
	<p>Vertical connection of the condensate inlet line</p> <p>2. Screw the supplied hose fitting [9] onto the condensate drain [F] and tighten with a torque of 3 ... 4 Nm (2.21 ... 2.95 ft-lb). Screw the screw plug [22] with the flat gasket [21] into the condensate inlet [D] and tighten firmly with a torque of 35 Nm +2 Nm (25.82 ft-lb +1.46 ft-lb).</p>
	<p>Recommendation:</p> <p>To ensure easy maintenance of the product, install a shut-off valve [X6] in the condensate inlet line [X5].</p>
	<p>3. For the condensate inlet line [X5], apply sealant to the end of a pressure-resistant pipe and screw the latter in at the vertical condensate inlet [C] or the horizontal condensate inlet [D].</p>


Installation work	
Illustration	Description / explanation
	<ol style="list-style-type: none">4. For the condensate drain, push the hose provided [X7] onto the hose fitting [9] and use a hose clamp to secure it.5. Connect the other end of the hose [X7] to the condensate drain line [X8].


Final steps	
1.	Before pressurisation, check all system connections for leak tightness and tighten if necessary.

7. Electrical installation

7.1 Warning notices



Personnel	
Skilled technical personnel - electrical engineering (see section "2.3 Target group and personnel" on page 8)	

DANGER	Electric voltage
	<p>Contact with electrically live components can result in death or serious injury.</p> <ul style="list-style-type: none"> • Only carry out installation, maintenance and repair work on the product and accessories when they have been isolated from the power source and secured against being switched back on again unintentionally. • Comply with all locally applicable legal requirements and regulations during installation. • Connect the protective conductor (earth connection) according to regulations.

WARNING	Ingress of moisture or foreign bodies
	<p>Removing components or opening the product may allow water or foreign bodies to enter the opened product. This can lead to accidents, personal injury and damage to property as well as impaired operation.</p> <ul style="list-style-type: none"> • Protect the product from splashing water or moisture. • Only open the product or remove components in a dry place. • Do not insert any foreign bodies into the openings of the product. • Keep all contact surfaces and openings free of dirt and moisture.

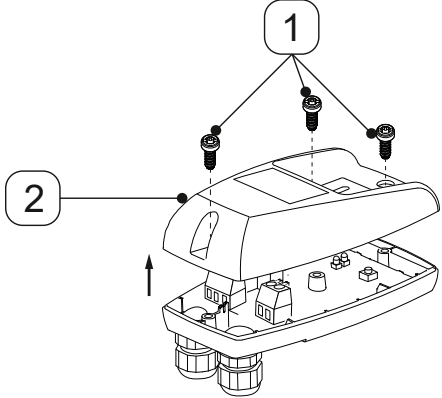
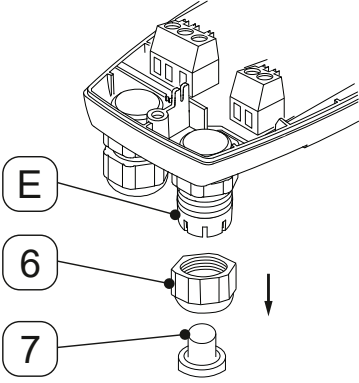
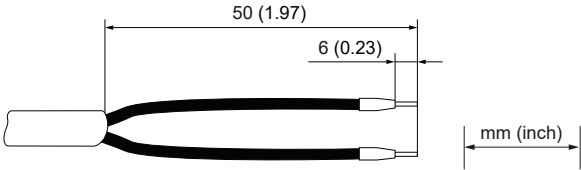
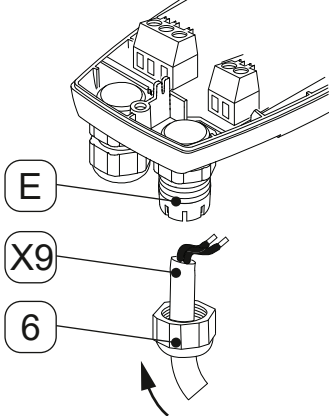
7.2 Connection work

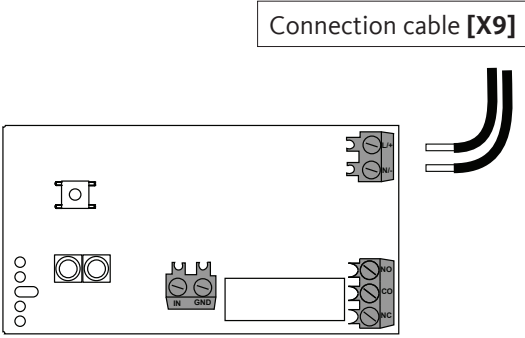
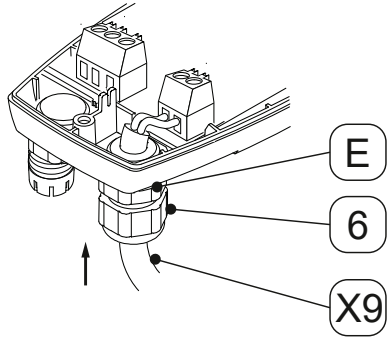
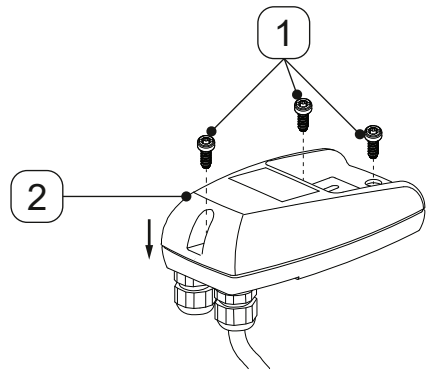
For connection work to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> • Stripping tool • Crimping tool for wire-end ferrules • Screwdriver – flat head size 2.5 mm (0.09 in) • Torx screwdriver - T15 	<ul style="list-style-type: none"> • 2-wire cable for 230 V power supply • 2-wire cable for 24 V power supply • 2/3-wire cable for dry contact (depending on the application) • 2-wire cable for external TEST button • Wire-end ferrules 	<p style="text-align: center;">Always to be worn:</p> <div style="display: flex; justify-content: center; gap: 20px;">   </div>

Preparatory tasks	
1.	Installation is completed (see section "6. Installation" on page 25).

7.2.1 Connecting the power supply

Connection work	
Illustration	Description / explanation
	<ol style="list-style-type: none"> 1. Loosen the 3 screws [1]. 2. Lift the top cover [2] off.
	<ol style="list-style-type: none"> 3. Unscrew the counter nut [6] from the right cable gland [E]. 4. Remove the plug [7] from the counter nut [6].
<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;">Connection cable [X9]</div> 	<ol style="list-style-type: none"> 5. Prepare the connection cable [X9].
	<ol style="list-style-type: none"> 6. Slide the counter nut [6] over the connection cable [X9]. 7. Insert the connection cable [X9] into the right cable gland [E].

Connection work	
Illustration	Description / explanation
 <p style="text-align: center;">Connection cable [X9]</p>	<p>8. Connect the connection cable [X9] according to the terminal diagram (see “4.7 Terminal diagram” on page 23).</p>
	<p>9. Draw the connection cable [X9] taut.</p> <p>10. Screw the counter nut [6] onto the right cable gland [E].</p>
	<p>11. Set the top cover [2] in place and insert the screws [1].</p> <p>12. Tighten the screws [1] with a torque of 0.9 Nm +0.5 Nm (0.66 ft-lb +0.37 ft-lb).</p>

7.2.2 Connecting the dry contact

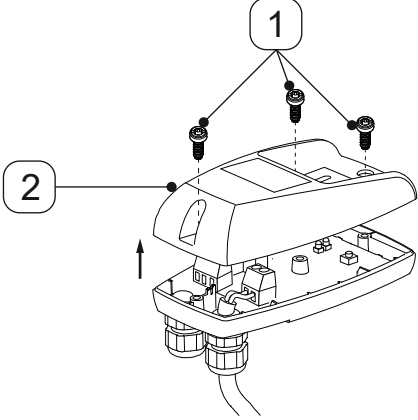
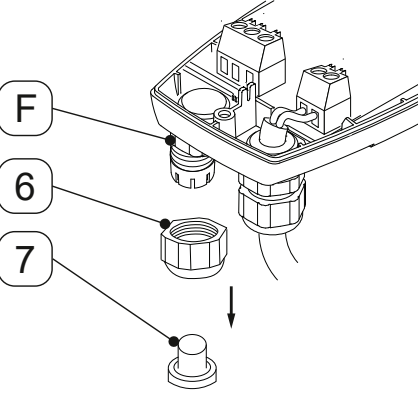
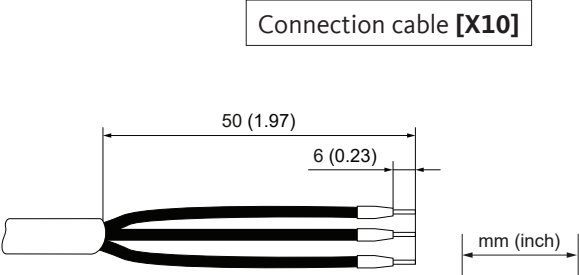

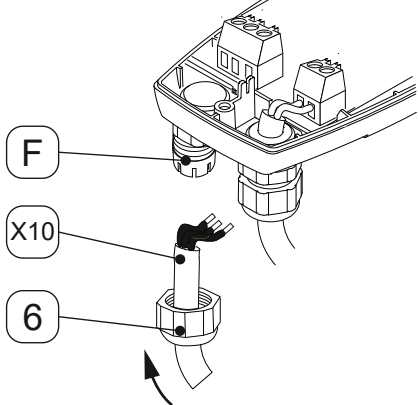
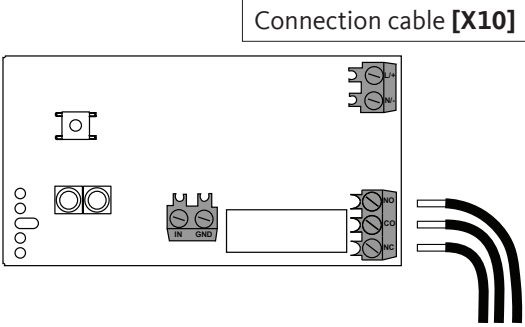
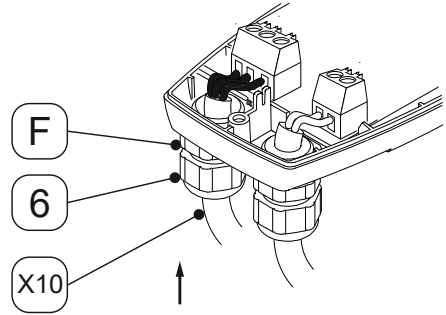
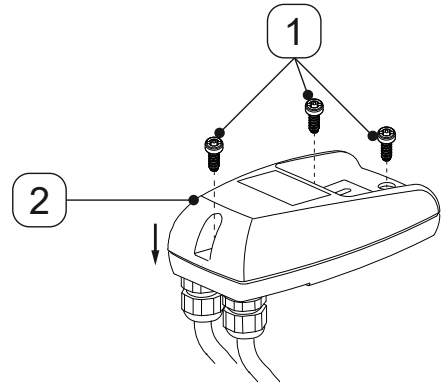
Illustration	Description / explanation
	<ol style="list-style-type: none"> 1. Loosen the 3 screws [1]. 2. Lift the top cover [2] off.
	<ol style="list-style-type: none"> 3. Unscrew the counter nut [6] from the left cable gland [F]. 4. Remove the plug [7] from the counter nut [6].
<p style="text-align: center;">Connection cable [X10]</p> 	<ol style="list-style-type: none"> 5. Prepare the dry contact cable (depending on the application). <div style="display: flex; align-items: center;">  <p>If the external TEST button is to be connected in addition to the dry contact, a 4/5-wire cable must be used for the connection (depending on the application).</p> </div>
	<ol style="list-style-type: none"> 6. Slide the counter nut [6] over the dry contact cable [X10]. 7. Insert the dry contact cable [X10] into the left cable gland [F].

Illustration	Description / explanation
 <p>Connection cable [X10]</p>	<p>8. Connect the dry contact cable [X10] as shown in the terminal diagram (see “4.7 Terminal diagram” on page 23).</p>
 <p>F</p> <p>6</p> <p>X10</p>	<p>9. Draw the connection cable [X10] taut.</p> <p>10. Screw the counter nut [6] onto the left cable gland [F].</p>
 <p>1</p> <p>2</p>	<p>11. Set the top cover [2] in place and insert the screws [1].</p> <p>12. Tighten the screws [1] with a torque of 0.9 Nm +0.5 Nm (0.66 ft-lb +0.37 ft-lb).</p>

7.2.3 Connecting the external TEST button

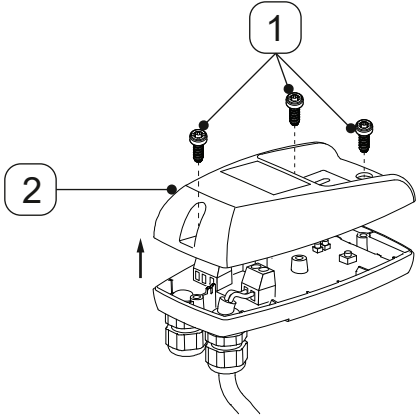
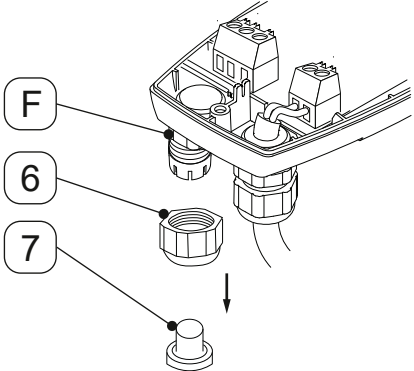
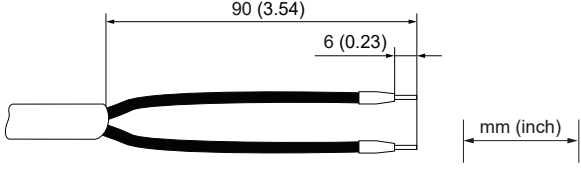

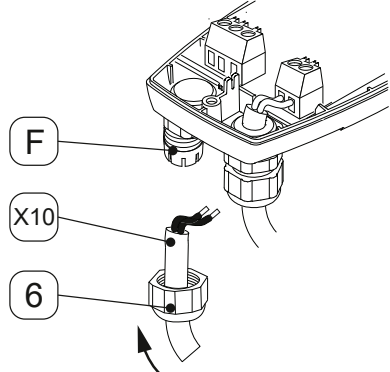
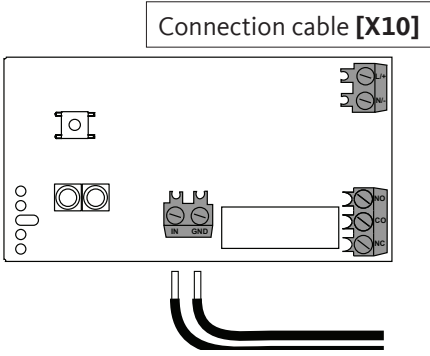
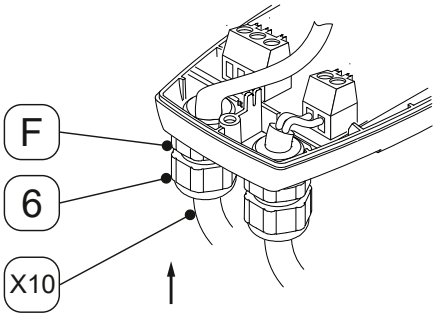
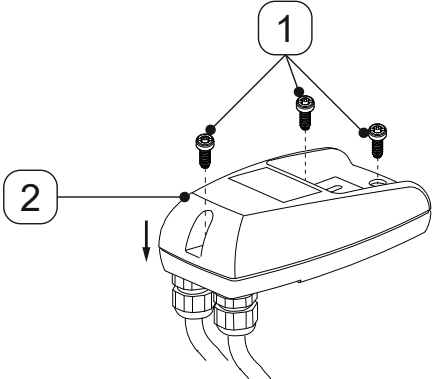


Illustration	Description / explanation
	<ol style="list-style-type: none"> 1. Loosen the 3 screws [1]. 2. Lift the top cover [2] off.
	<ol style="list-style-type: none"> 3. Unscrew the counter nut [6] from the left cable gland [F]. 4. Remove the plug [7] from the counter nut [6].
<p>Connection cable [X10]</p> 	<ol style="list-style-type: none"> 5. Prepare the connection cable for the external TEST button (depending on the application). <p> If the dry contact is to be connected in addition to the external TEST button, a 4/5-wire cable must be used for the connection (depending on the application).</p>
	<ol style="list-style-type: none"> 6. Slide the counter nut [6] over the connection cable for the external TEST button [X10]. 7. Insert the connection cable for the external TEST button [X10] into the left cable gland [F].

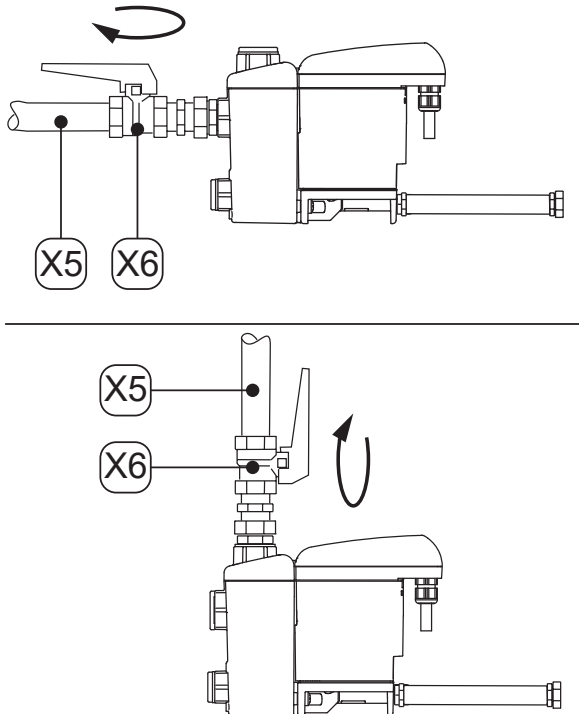
Illustration	Description / explanation
	<p>8. Connect the connection cable for the external TEST button [X10] as shown in the terminal diagram (see “4.7 Terminal diagram” on page 23).</p>
	<p>9. Tighten the connection cable for the external TEST button [X10].</p> <p>10. Screw the counter nut [6] onto the left cable gland [F].</p>
	<p>11. Set the top cover [2] in place and insert the screws [1].</p> <p>12. Tighten the screws [1] with a torque of 0.9 Nm +0.5 Nm (0.66 ft-lb +0.37 ft-lb).</p>

8. Start-up procedure

8.1 Warning notices

Personnel	
Skilled technical personnel - pressure equipment and systems and skilled technical personnel - electrical (see section "2.3 Target group and personnel" on page 8)	
DANGER	Sudden escape of pressurised fluids
	<p>There is a danger of death or serious personal injury resulting from contact with fast or suddenly escaping fluids or through bursting system parts.</p> <ul style="list-style-type: none"> • Before pressurisation, check all system connections for leak tightness and tighten if necessary. • Slowly pressurise the system.
DANGER	Electric voltage
	<p>Contact with electrically live components can result in death or serious injury, as well as malfunction, device failure or material damage.</p> <ul style="list-style-type: none"> • Only operate the product and accessories with the cover complete and closed, the electronics housing closed, or the switch cabinet closed. • Check the product and accessories before commissioning in accordance with the locally applicable legal requirements and regulations.


8.2 Start-up steps

Illustration	Description / explanation
	<ol style="list-style-type: none"> 1. Connect the power supply. 2. Slowly pressurise the system section (e.g., by slowly opening the recommended shut-off valve [X6] in the condensate inlet line [X5]). 3. Carry out a functional test (see "10.3.2 Functional test" on page 48).

9. Operation

9.1 Warning notices

Personnel	
Operating personnel (see section “2.3 Target group and personnel” on page 8)	

DANGER	Electric voltage
	Contact with electrically live components can result in death or serious injury.
	<ul style="list-style-type: none"> Only operate the product and accessories with the cover complete and closed, the electronics housing closed, or the switch cabinet closed.

9.2 Operating states

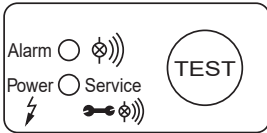
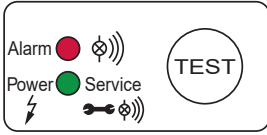
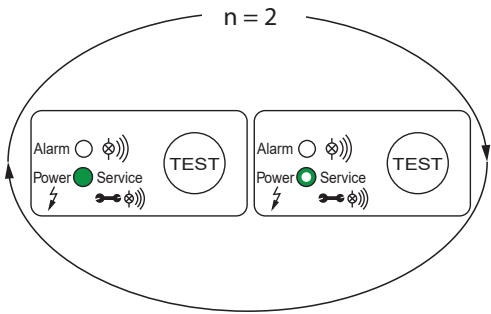
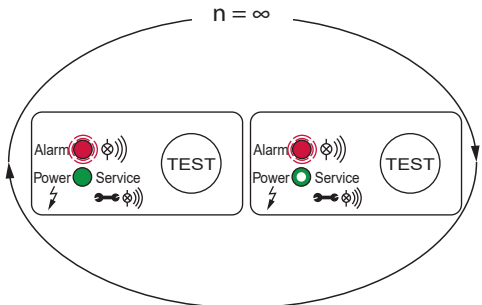
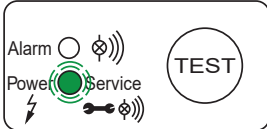
Illustration	Description / explanation
	<p>Disconnected</p> <ul style="list-style-type: none"> All LEDs are off
	<p>Switch on / power-on self-test</p> <ul style="list-style-type: none"> All LEDs are on for 1 second The BEKOMAT® carries out a diagnosis of the electronics unit
	<p>Positive power-on self-test Number of repetitions n = 2x</p> <ul style="list-style-type: none"> The red ALARM LED is off The green POWER LED is on (100 % brightness) while the solenoid valve is cycling The green POWER LED is on (50 % brightness) while the solenoid valve is not cycling → The BEKOMAT® switches to normal operation




Illustration	Description / explanation
	<p>Negative power-on self-test Number of repetitions n = 20x</p> <ul style="list-style-type: none"> • The red ALARM LED is on • The green POWER LED is on (100 % brightness) while the solenoid valve is cycling quickly • The green POWER LED is on (50 % brightness) while the solenoid valve is not cycling <ul style="list-style-type: none"> → The BEKOMAT® goes into fail-safe mode (continuous loop n = ∞) • The solenoid valve cycles once per second
	<p>Ready for operation (normal operating mode)</p> <ul style="list-style-type: none"> • The red ALARM LED is off • The green POWER LED is on (50 % brightness)
	<p>Discharge procedure (TEST button pressed briefly)</p> <ul style="list-style-type: none"> • The red ALARM LED is off • The green POWER LED is on (100 % brightness) while the solenoid valve is cycling
	<p>Pre-alarm (TEST button pressed > 1 minute and < 5 minutes)</p> <ul style="list-style-type: none"> • The red ALARM LED flashes • The green POWER LED is on (100% brightness)
	<p>Alarm (TEST button pressed > 5 minutes)</p> <ul style="list-style-type: none"> • The red ALARM LED is on • The green POWER LED is on (50 % brightness)

Illustration	Description / explanation
	<p>Alarm mode (condensate drain malfunction)</p> <ul style="list-style-type: none"> • The red ALARM LED flashes • The green POWER LED is on (50 % brightness) <ul style="list-style-type: none"> → The solenoid valve cycles every 4 minutes <p>After the malfunction has been eliminated, the BEKOMAT® automatically switches to normal operation.</p>
	<p>Maintenance signal</p> <ul style="list-style-type: none"> • The green POWER LED flashes. <ul style="list-style-type: none"> → Change the Service-Unit

For further information about fault indications during operation, see section “15. Troubleshooting” on page 57.

10. Maintenance


10.1 Warning notices

Personnel	
Skilled technical personnel - product servicing (see section "2.3 Target group and personnel" on page 8)	
DANGER	Sudden escape of pressurised fluids
	<p>There is a danger of death or serious personal injury resulting from contact with fast or suddenly escaping fluids or through bursting system parts.</p> <ul style="list-style-type: none"> • Before starting work, depressurise the pressurised system and secure it against unintentional pressurisation.
DANGER	Electric voltage
	<p>Contact with electrically live components can result in death or serious injury.</p> <ul style="list-style-type: none"> • Only carry out maintenance and repair work on the product when it has been isolated from the power source and locked and tagged out. • Comply with all locally applicable legal requirements and regulations during installation.
WARNING	Ingress of moisture or foreign bodies
	<p>Removing components or opening the product may allow water or foreign bodies to enter the opened product. This can lead to accidents, personal injury and damage to property as well as impaired operation.</p> <ul style="list-style-type: none"> • Protect the product from splashing water or moisture. • Only open the product or remove components in a dry place. • Do not insert any foreign bodies into the openings of the product. • Keep all contact surfaces and openings free of dirt and moisture. • Do not clean using pressure washers or steam cleaners.

10.2 Maintenance schedule


Maintenance	Interval
Replacing the Service-Unit	After 8760 operating hours or 1 million switching cycles*; at least annually
Cleaning	Annually
Functional test	Monthly
Visual inspection	Weekly
Leakage test	After mounting, installation and maintenance work on the product

* based on 7 bar(g) (101.5 psi(g)) and pH-neutral condensate

INFORMATION	Carrying out cleaning work
	Carry out cleaning work during wear part replacement since all parts are disassembled at this point.

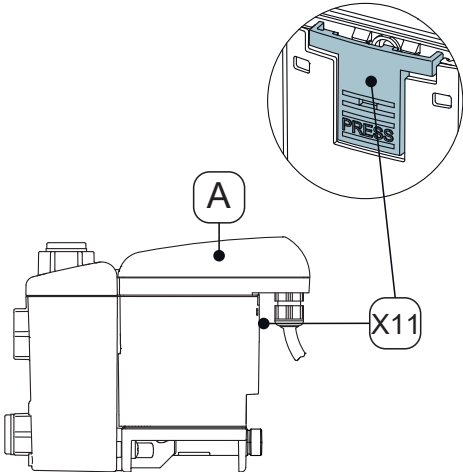
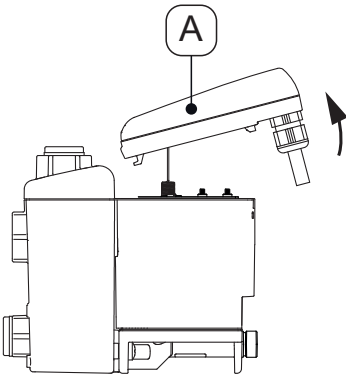
10.3 Maintenance work

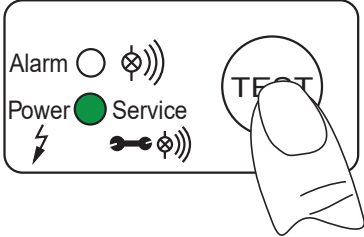
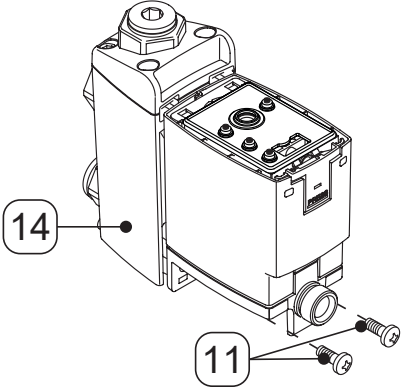
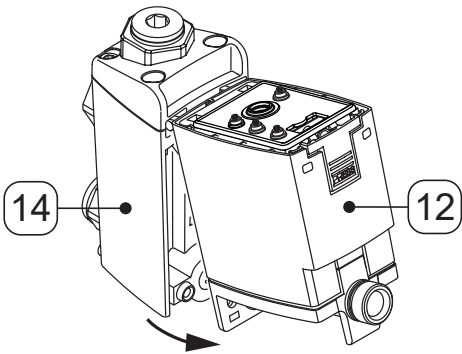
For maintenance work to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

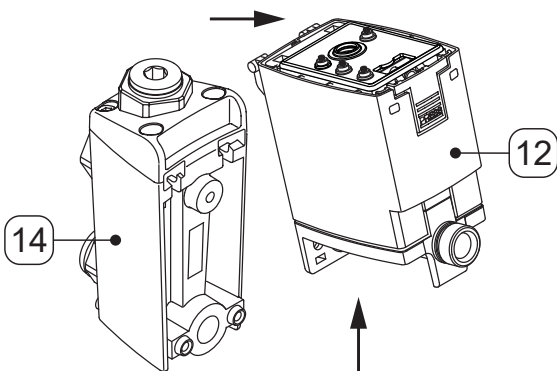
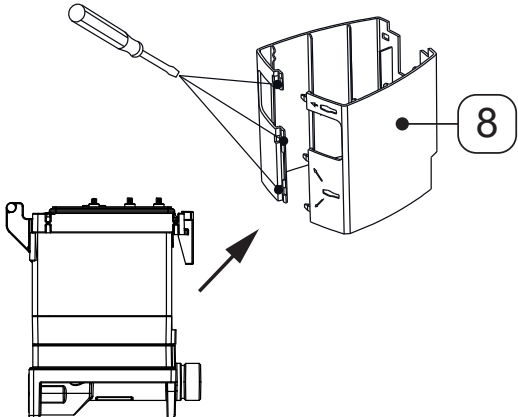
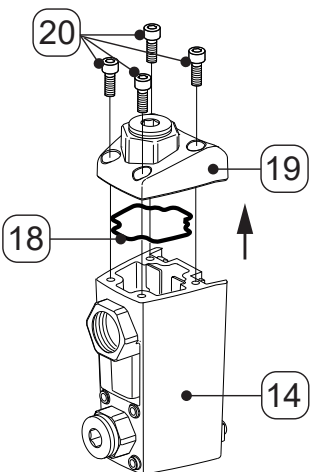
Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> Screwdriver – flat head size 2.5 mm (0.09 in) Combination wrench or adjustable wrench 	<ul style="list-style-type: none"> Sealants Lubricant for greasing the O-rings Mild cleaning agent Cotton or disposable cloth 	<p>Always to be worn:</p> 

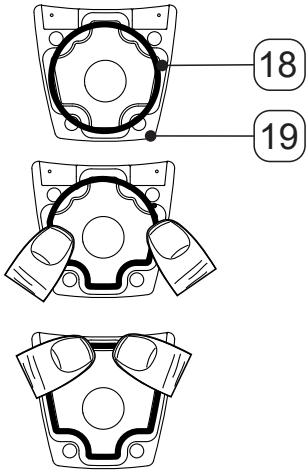
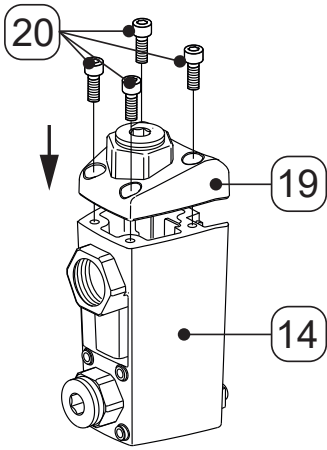
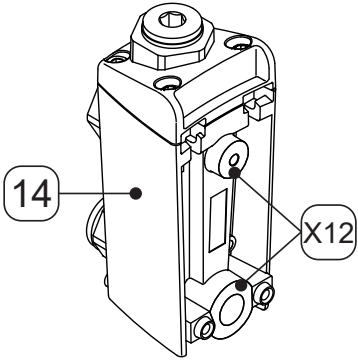
Preparatory tasks	
1.	The product has been fully shut down (see “12. Shut-down procedure” on page 51).
2.	The product has been dismantled (see “13. Dismounting” on page 53).

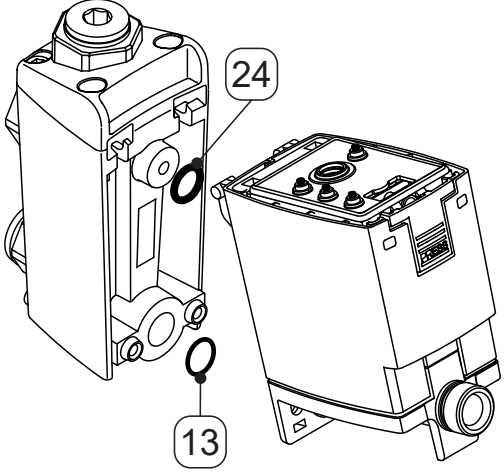
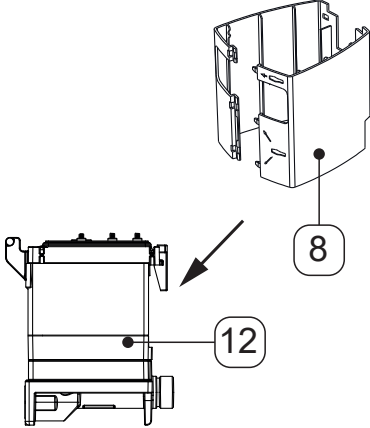
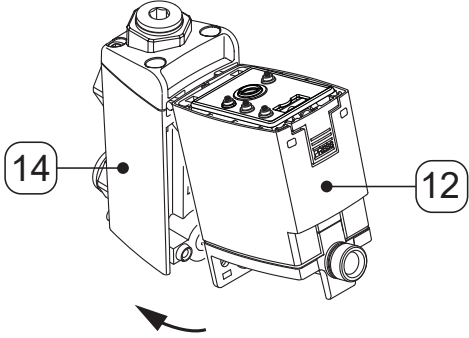
10.3.1 Changing the Service-Unit

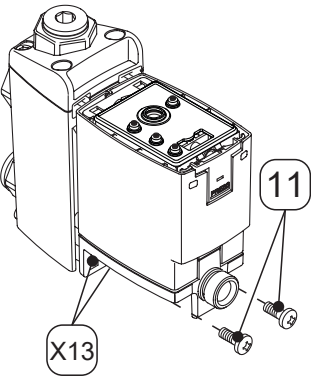
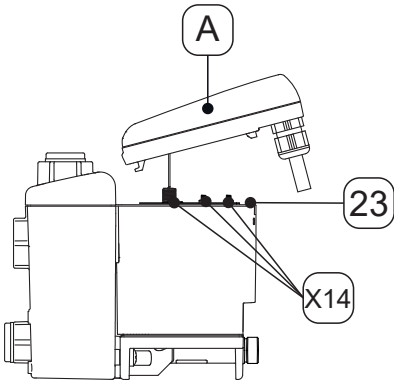
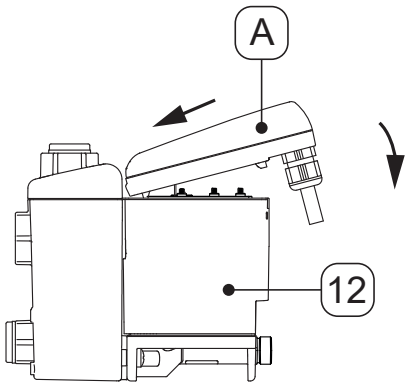
Replacement work	
Illustration	Description / explanation
	<ol style="list-style-type: none"> Release the control unit [A] by pressing the locking hook [X11].
	<ol style="list-style-type: none"> Remove the control unit [A].

Replacement work	
Illustration	Description / explanation
 <p>Alarm ○ ⊕))) Power ● ⊕))) Service ⊕)))</p>	<ol style="list-style-type: none"> 3. Press the TEST button [A] on the control unit and hold it for at least 5 seconds. → The green POWER LED flashes 4. Once the green POWER LED is permanently lit, release the TEST button. → The "Service time" counter is reset 5. Carefully put the control unit [A] aside.
	<ol style="list-style-type: none"> 6. Undo the screws [11] on the condensate collecting container [14] and remove them.
	<ol style="list-style-type: none"> 7. Pull the Service-Unit [12] away from the collecting container [14] as shown.

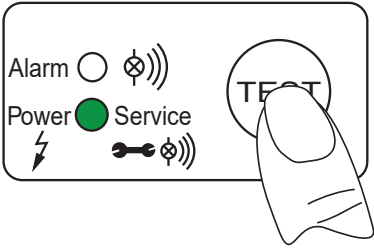
Replacement work	
Illustration	Description / explanation
	<p>8. Lift the Service-Unit [12] up and out of the bracket of the condensate collecting container [14] as shown.</p>
	<p>9. If a design shell [8] is attached, carefully pry off the design shell [8] at the marked positions with a flat head screwdriver.</p> <p>10. Carefully remove the design shell [8].</p>
	<p>11. Undo the 4 hexagon socket head cap screws [20] of the condensate collecting container cover [19].</p> <p>12. Lift the condensate collecting container cover [19] and the O-ring [18] off.</p> <p>13. Dispose of the old Service-Unit [12] and the old O-ring [18] properly (see "14. Disposal" on page 55).</p> <p>14. Clean the condensate collecting container [14].</p>

Replacement work	
Illustration	Description / explanation
	<p>15. Clean the cover sealing faces of the condensate collecting container cover [19] and wipe down using a clean cloth without any cleaning agents.</p> <p>16. Grease the new O-ring [18] as shown and insert into the condensate collecting container cover [19].</p>
	<p>17. Place the condensate collecting container cover [19] on the condensate collecting container [14] and insert the 4 hexagon socket head cap screws [20].</p> <p>18. Tighten the 4 hexagon socket head cap screws [20] cross-wise with a torque of 8 Nm +2 Nm (5.9 ft-lb +1.46 ft-lb).</p>
	<p>19. Clean the sealing faces [X12] on the condensate collecting container [14] using a clean cloth without any cleaning agents.</p>

Replacement work	
Illustration	Description / explanation
	<p>20. Check to ensure the new Service-Unit [12] fits the control unit [A]:</p> <ul style="list-style-type: none"> → Model designation → The colour of the locking hook [X11] is identical to the colour of the control unit <p>21. Check the new O-rings [13, 24] on the new Service-Unit. Remove the transport lock from the O-rings [13, 24].</p> <p>22. Dispose of the old O-rings [13, 24] properly (see “14. Disposal” on page 55).</p>
	<p>23. Attach the demounted design shell [8] to the new Service-Unit [12].</p>
	<p>24. Fit the new Service-Unit [12] into the bracket of the condensate collecting container [14] as shown and press onto the condensate collecting container [14].</p>

Replacement work	
Illustration	Description / explanation
	<p>25. Insert the 2 cross-slot screws [11] into the holes [X13] and tighten with a torque of 2.5 Nm +0.5 Nm (1.84 ft-lb +0.37 ft-lb).</p>
	<p>26. Check to confirm that the sealing mat [23] and the contact springs [X14] are clean, dry and free of foreign objects.</p> <p>27. Insert the sensor of the control unit [A] into the sensor tube opening.</p>
	<p>28. Insert the hooks on the control unit [A].</p> <p>29. Press the control unit [A] against the Service-Unit [12] and lock into place.</p>

10.3.2 Functional test

Illustration	Description / explanation
	<p>Press the TEST button for 2 ... 5 seconds.</p> <ul style="list-style-type: none"> → The green POWER LED lights up → The valve opens and condensate is drained

10.3.3 Visual inspection



During the visual inspection of the product, inspect all components for mechanical damage and corrosion. Replace damaged components immediately.

10.3.4 Leakage test

The leakage test is a non-destructive test method and is used to prove leak tightness in vacuum and overpressure systems. The leakage test can be carried out in different ways. The manufacturer does not recommend any specific method over another. Selection and determination of the test procedure is the responsibility of the company operating the pressurised system and must be carried out in conformity with the applicable standards and guidelines (e.g., DIN EN 1779)

10.3.5 Cleaning

10.4 Warning notices

CAUTION	Personal injury through inappropriate use of cleaning media
	<p>Inappropriate use of cleaning media may result in minor injuries and damage to health.</p> <ul style="list-style-type: none"> • Never clean the device with a dripping wet cloth. • Do not clean using pressure washers. • Never use abrasive or aggressive cleaning agent or solvents which could damage the outer coating (e.g. markings, type plate, corrosion protection, etc.). • Never clean the device with hard or pointed implements. • Use an anti-static, damp cloth for cleaning the outside. • Immediately replace any product markings (pictograms, markings) that have become illegible. • Use personal protective equipment. • Use cleaning media in accordance with the manufacturer's instructions.
NOTE	Observe local hygiene regulations
	In addition to the cleaning instructions listed, any regionally applicable or company-specific hygiene regulations must be observed.

Preparatory tasks

- | | |
|----|--|
| 1. | The product has been fully shut down (see section "12. Shut-down procedure" on page 51). |
|----|--|

Cleaning work

- | | |
|----|--|
| 1. | Spray mild cleaning agent onto a cotton cloth or disposable tissue until it is damp (not wet). |
| 2. | Rub the surfaces of the product with the damp cloth. |

Final steps

- | | |
|----|--|
| 1. | Start the product up (see section "8. Start-up procedure" on page 37). |
|----|--|

11. Consumables, accessories and spare parts

11.1 Order information

Manufacturer customer service requires the following data for an enquiry or order:

- Serial number (see type plate)
- Material number and designation of the accessory or spare part
- Required quantity of accessories or spare parts to be delivered

The contact data for the relevant manufacturer customer services are listed in section “1.1 Contact” on page 5.

11.2 Accessories



Description	Material no.
230 VAC trace heater	4041657
Drain kit	2000046
Mounting bracket for wall and floor	4012883

11.3 Spare parts

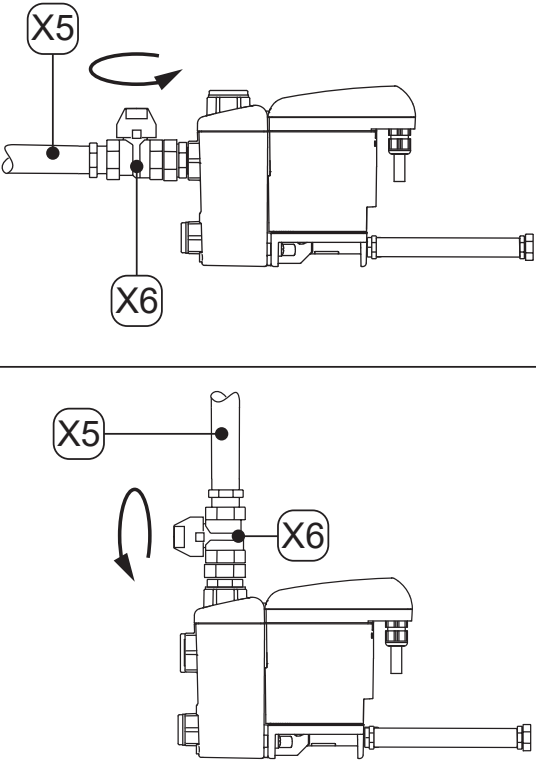
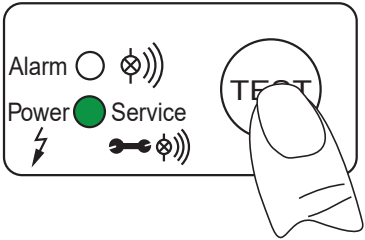
Description / explanation	Material no.
Service-Unit BEKOMAT® Vario 33U	4024394
Service-Unit BEKOMAT® Vario 33U CO	4024396
Set of seals	4024397
Design shell	4010167

12. Shut-down procedure

12.1 Warning notices



Personnel	
Skilled technical personnel - product servicing (see section "2.3 Target group and personnel" on page 8)	
DANGER	Sudden escape of pressurised fluids
	<p>There is a danger of death or serious personal injury resulting from contact with fast or suddenly escaping fluids or through bursting system parts.</p> <ul style="list-style-type: none"> • Set up a safety area around the working area before starting work. • Before starting work, depressurise the pressurised system and secure it against unintentional pressurisation.
DANGER	Electric voltage
	<p>There is a danger of death or serious injuries as well as malfunction and device failure following contact with components which are in contact with electric voltage.</p> <ul style="list-style-type: none"> • Set up a safety area around the working area before starting work. • Before starting work, isolate the product and accessories from the power source and secure them against being switched back on again unintentionally.

12.2 Shut-down steps

Illustration	Description / explanation
	<ol style="list-style-type: none"> 1. Interrupt the condensate feed at the condensate inlet line [X5] (e.g., by closing the recommended shut-off valve [X6]).
	<ol style="list-style-type: none"> 2. Press the TEST button briefly multiple times. <ul style="list-style-type: none"> → The BEKOMAT® is depressurised → The condensate remaining in the BEKOMAT® is drained 3. Disconnect the BEKOMAT® from the power supply and switch off all power.




13. Dismounting

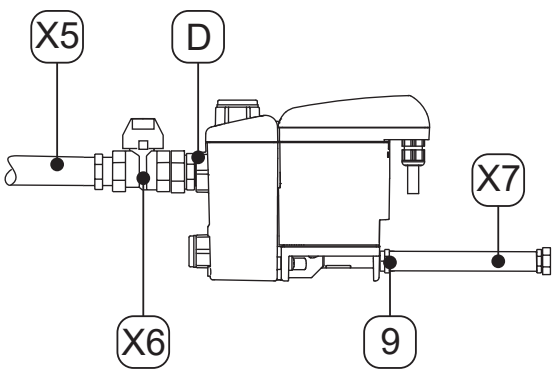
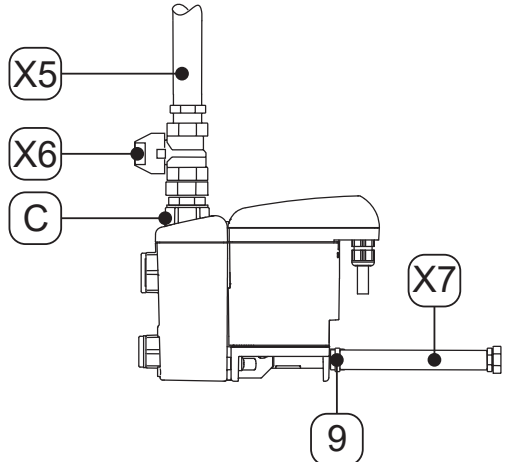
13.1 Warning notices

Personnel	
Skilled technical personnel - product servicing (see section "2.3 Target group and personnel" on page 8)	
DANGER	Sudden escape of pressurised fluids
	<p>There is a danger of death or serious personal injury resulting from contact with fast or suddenly escaping fluids or through bursting system parts.</p> <ul style="list-style-type: none"> • Set up a safety area around the working area before starting work. • Before starting work, depressurise the pressurised system and secure it against unintentional pressurisation.
DANGER	Electric voltage
	<p>There is a danger of death or serious injuries as well as malfunction and device failure following contact with components which are in contact with electric voltage.</p> <ul style="list-style-type: none"> • Set up a safety area around the working area before starting work. • Before starting work, isolate the product and accessories from the power source and secure them against being switched back on again unintentionally.

13.2 Dismounting steps

For dismounting work to be carried out, the following prerequisites must be met and the preparatory tasks must have been completed.



Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> • Combination wrench or adjustable wrench 	<ul style="list-style-type: none"> • No material necessary 	<p style="text-align: center;">Always to be worn:</p> <div style="display: flex; justify-content: space-around; align-items: center;">    </div>
Preparatory tasks		
1.	The product has been fully shut down (see section "12. Shut-down procedure" on page 51).	
2.	Depressurise the pressurised system or the respective system section and secure it against unintentional pressure build-up.	

Dismounting steps	
Illustration	Description / explanation
	<ol style="list-style-type: none"> 1. Remove the hose [X7] from the hose fitting [9]. 2. Remove the condensate inlet line [X5] and recommended shut-off valve [X6] from the vertical condensate inlet [C] or the horizontal condensate inlet [D] and disassemble. 3. Disconnect all electrical connections.
	

14. Disposal

At the end of their useful life the product and the accessories must be sent for disposal e.g. by a specialist company. Materials such as glass, plastics and some chemical compounds are mostly recoverable, reusable or recyclable.

14.1 Warning notices

NOTE	Inappropriate disposal
	<p data-bbox="448 533 1471 595">Inappropriate disposal of parts, components, operating and auxiliary materials as well as cleaning media can cause environmental damage.</p> <ul data-bbox="448 607 1471 792" style="list-style-type: none"> • Dispose of all components, parts, operating and auxiliary materials as well as cleaning agents professionally and in accordance with all locally applicable legal requirements and regulations. • Dispose of electrical and electronic components using a specialist disposal company or return them to manufacturer. • In case of doubt, consult a local disposal company before disposal.
INFORMATION	Disposal of electrical and electronic equipment
	<p data-bbox="448 869 1471 965">Electrical and electronic equipment (EEE) contains materials, components and substances which can be dangerous and harmful to human health and the environment if the waste from electrical and electronic equipment (WEEE) is not disposed of properly.</p> <p data-bbox="448 999 1471 1095">Electrical and electronic equipment is marked with a crossed-out rubbish bin symbol. The crossed-out rubbish bin symbol indicates that electrical and electronic equipment must be collected separately and must not be disposed of together with unsorted household waste.</p> <p data-bbox="448 1128 1471 1225">For additional information regarding locally applicable legal requirements and regulations concerning recycling electrical and electronic products, contact your local disposal companies or the responsible municipal authority.</p>

14.2 Disposal of operating and auxiliary materials

Operating material / auxiliary material	EU waste code
Adsorption materials, filter materials, cleaning wipes and protective clothing - contaminated by oils or other hazardous substances	15 02 02
Adsorption materials, filter materials, cleaning wipes and protective clothing - with the exception of those classified by 15 02 02	15 02 03
Packaging - paper and cardboard	15 01 01
Packaging - plastic material	15 01 02
Waste oil - mineral	13 02 05
Waste oil - synthetic	13 02 06

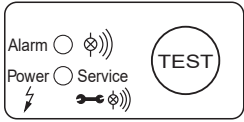
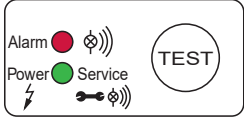
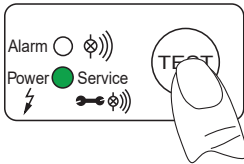
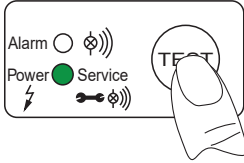
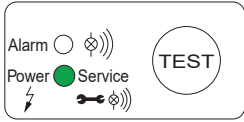
14.3 Disposal of components

Ensure the following prerequisites are met before disposal:

Prerequisites	
1.	The product and the accessories have been shut down and dismantled.
2.	The product and the accessories have been cleaned and any fluid residue has been removed.


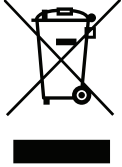
Components	EU waste code
Electric and electronic devices with the exception of those covered by 20 01 21, 20 01 23 and 20 01 35	20 01 36
Plastic material	20 01 39
Metals	20 01 40

15. Troubleshooting

Error or fault pattern	Possible causes	Troubleshooting
	<ul style="list-style-type: none"> All LEDs are off 	<ul style="list-style-type: none"> Read off the operating voltage on the type plate and check it Check whether voltage is present at the terminals of the sensor board (L, N) Check the connection terminals on the sensor board.
	<ul style="list-style-type: none"> All LEDs are on continuously 	<ul style="list-style-type: none"> Disconnect the product from the power supply and reconnect after > 5 seconds Inspect the sensor board for potential damage
	<ul style="list-style-type: none"> No condensate is drained after pressing the TEST button 	<ul style="list-style-type: none"> Check the inlet and the drain line Replace the Service-Unit Check the valve function by pressing the TEST button → Valve switching can be heard clearly (clicking sound) Check the connection terminals on the sensor board.
	<ul style="list-style-type: none"> Condensate is only drained when the TEST button is pressed 	<ul style="list-style-type: none"> Install the inlet line with a slope > 3 % Install a venting line Check whether the necessary minimum pressure has been reached (see "4. Technical data" on page 20) Replace the Service-Unit
	<ul style="list-style-type: none"> The BEKOMAT® discharges continuously 	<ul style="list-style-type: none"> Replace the Service-Unit

16. Appendices

16.1 Certificates

Symbol	Description / explanation
	CE marking The CE marking indicates that a product fulfils all the EU regulations applicable to the product and that all basic safety and health requirements were met during its production. The product may be sold on the European market.
	WEEE marking The crossed out rubbish bin marks an electrical or electronic product that must not be disposed of with domestic waste at the end of its service life. Free collecting points for used electrical equipment as well as further acceptance points for reuse of the products are available for them to be returned. Addresses can be obtained from the local authorities.

BEKO TECHNOLOGIES GmbH

Im Taubental 7
D - 41468 Neuss
Tel. +49 2131 988 0
Fax +49 2131 988 900
info@beko-technologies.com
service-eu@beko-technologies.com

DE**BEKO TECHNOLOGIES LTD.**

Unit 11-12 Moons Park
Burnt Meadow Road
North Moons Moat
Redditch, Worcs, B98 9PA
Tel. +44 1527 575 778
info@beko-technologies.co.uk

GB**BEKO TECHNOLOGIES S.à.r.l.**

Zone Industrielle
1 Rue des Frères Rémy
F - 57200 Sarreguemines
Tél. +33 387 283 800
info@beko-technologies.fr
service@beko-technologies.fr

FR**BEKO TECHNOLOGIES B.V.**

Veenen 12
NL - 4703 RB Roosendaal
Tel. +31 165 320 300
benelux@beko-technologies.com
service-bnl@beko-technologies.com

NL**BEKO TECHNOLOGIES
(Shanghai) Co. Ltd.**

Rm.715 Building C, VANTONE Center
No.333 Suhong Rd.Minhang District
201106 Shanghai
Tel. +86 (21) 50815885
info.cn@beko-technologies.cn
service1@beko.cn

CN**BEKO TECHNOLOGIES s.r.o.**

Na Pankraci 58
CZ - 140 00 Praha 4
Tel. +420 24 14 14 717 /
+420 24 14 09 333
info@beko-technologies.cz

CZ**BEKO Tecnológica España S.L.**

Torruella i Urpina 37-42, nave 6
E - 08758 Cervelló
Tel. +34 93 632 76 68
Mobil +34 610 780 639
info.es@beko-technologies.es

ES**BEKO TECHNOLOGIES LIMITED**

Room 2608B, Skyline Tower,
No. 39 Wang Kwong Road
Kwloon Bay Kwloon, Hong Kong
Tel. +852 2321 0192
Raymond.Low@beko-technologies.com

HK**BEKO TECHNOLOGIES INDIA Pvt. Ltd.**

Plot No.43/1 CIEEP Gandhi Nagar
Balanagar Hyderabad
IN - 500 037
Tel. +91 40 23080275 /
+91 40 23081107
Madhusudan.Masur@bekoindia.com
service@bekoindia.com

IN**BEKO TECHNOLOGIES S.r.l**

Via Peano 86/88
I - 10040 Leinì (TO)
Tel. +39 011 4500 576
Fax +39 0114 500 578
info.it@beko-technologies.com
service.it@beko-technologies.com

IT**BEKO TECHNOLOGIES K.K**

KEIHIN THINK Building 8 Floor
1-1 Minamiwatarida-machi
Kawasaki-ku, Kawasaki-shi
JP - 210-0855
Tel. +81 44 328 76 01
info@beko-technologies.jp

JP**BEKO TECHNOLOGIES Sp. z o.o.**

ul. Pańska 73
PL - 00-834 Warszawa
Tel. +48 22 314 75 40
info.pl@beko-technologies.pl

PL**BEKO TECHNOLOGIES S. de R.L. de C.**

BEKO Technologies, S de R.L. de C.V.
Blvd. Vito Alessio Robles 4602 Bodega 10
Zona Industrial
Saltillo, Coahuila, 25107
Mexico
Tel. +52(844) 218-1979
informacion@beko-technologies.com

MX**BEKO TECHNOLOGIES, CORP.**

900 Great Southwest Pkwy SW
Atlanta, GA 30336
USA
Tel. +1 404 924-6900
beko@bekousa.com

US